



BRIGHTON
surfing technology



MANUAL DE INSTRUCCIONES

TABLET PC 9.7" IPS-HD 1280x800-3G
QUAD CORE-3G-GPS-WIFI-BLUETOOTH-A 4.4

BTPC-970QC3G-B-N

CONTENIDO

Advertencias de seguridad

Introducción

- Preparación

- Iconos de estado

Guía de inicio rápido

- Botones y funciones

- Encendido y apagado

- Modo de espera

- Uso de la pantalla táctil

- Pantalla de inicio

- Ventana de aplicaciones

- Conexión USB

- Métodos de entrada

- Operatividad

Funcionamiento básico

- Gestión de SIM

- Wifi e Internet

- Bluetooth

- Conexión a Redes - 3G

- Modos de Sonido

- Almacenamiento

- Aplicaciones

- Cuentas y sincronización

- Servicios de localización

- Seguridad

- Copia de seguridad

- Fecha y hora

- Tiempo de inicio y cierre del sistema

- Accesibilidad

- Engineer

Multimedia

- Camera

- Radio FM

Comunicación

- Teléfono

- Mensaje de texto

- Lista de contactos

Internet

- Browser

Función GPS

Otras funciones

- Administrador de archivos

- Grabadora

Procedimientos de instalación

ADVERTENCIAS DE SEGURIDAD

Este manual contiene instrucciones de seguridad importantes e información para el uso correcto del dispositivo. Por favor, asegúrese de leer este manual detenidamente antes de su uso para evitar cualquier accidente.

- No coloque el dispositivo en ambientes calientes, húmedos o polvorientos, sobre todo en verano, no lo guarde en el interior de un automóvil con las ventanillas cerradas.
- Evite dejar caer el dispositivo, podría causar daños o un mal funcionamiento.
- No use el dispositivo mientras realiza otras actividades que requieran su atención.
- Asegúrese de utilizar los cargadores y los accesorios que acompañan al dispositivo.

Asegúrese de cargar el dispositivo con el adaptador suministrado cuando se produzcan las siguientes situaciones:

- El icono de la batería se muestra bajo.
- El sistema se apaga sólo automáticamente.
- Las teclas de funcionamiento no responden adecuadamente.
- El dispositivo muestra en la esquina superior derecha el icono de batería en rojo.

INTRODUCCIÓN

PREPARACIÓN

Antes de proceder al primer uso, por favor cargue la batería por completo.


ICONOS DE ESTADO

Al recibir un aviso, se mostrará un icono en la barra superior. Deslice hacia abajo la barra para ver el aviso. Una vez visto vuelva a cerrar la barra de avisos.

	Nuevo e-mail		Modo avión
	USB conectado		USB depuración
	Botón VOLVER		Descargando
	Ajustes y APK recientes		Menú principal
	Estado de batería		Wi-Fi conectado
	Captura de pantalla		

GUÍA DE INICIO RÁPIDO

BOTONES Y FUNCIONES

Botón Encendido	Pulsación larga: Encender y apagar. Pulsación corta: modo espera.
Volume +	Subir volumen
Volume -	Bajar el volumen
Botón Home	Para volver al menú principal
Botón Volver	Para volver a la pantalla anterior
Botón Menú 	Muestra el menú de aplicaciones.
Botón Ajustes	Para ver funciones y APK recientes
Captura de Pantalla	Toma una imagen de la pantalla actual

ENCENDIDO Y APAGADO


Encendido: Mantenga pulsado el botón de encendido durante tres segundos. El sistema entra en estado de bloqueo de la pantalla, por favor desbloquéelo.

Apagado: Mantenga pulsado el botón POWER. Seleccione apagado. Tiene otras opciones como modo silencio, modo avión, etc. Confirme la selección.

MODO DE ESPERA

La pantalla irá al modo de espera cuando no tenga actividad para ahorrar batería. Si quiere ponerla en espera presione el botón de encendido/apagado brevemente. Si quiere volver a encenderla, presione de nuevo el botón de encendido/apagado.

Tras encender la pantalla, debe desbloquearla.

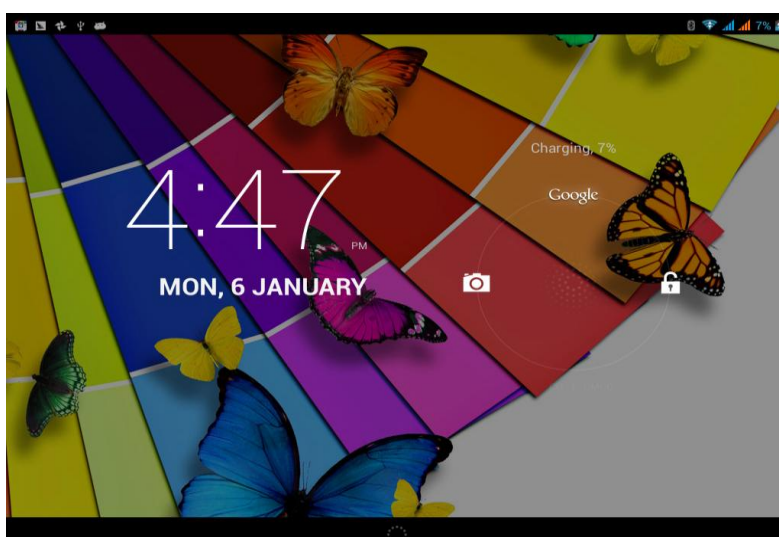

USO DE LA PANTALLA TÁCTIL


Para seleccionar un icono de la pantalla pulse sobre él. El teclado se usa de la misma manera, pulsando directamente en las teclas.

Puede pasar las pantallas horizontalmente, deslizando de izquierda a derecha o de derecha a izquierda.


Cuando gire el dispositivo la pantalla girará.

PANTALLA DE INICIO


Mantenga pulsado en algún espacio en blanco para añadir elementos, cambiar el fondo de pantalla, etc.

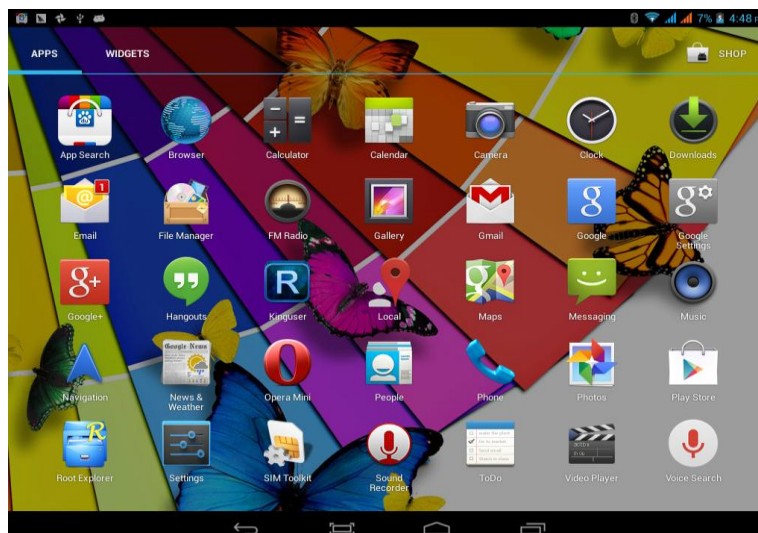

Página de inicio extendida: La página de inicio se puede extender más allá de la amplitud de la pantalla para ofrecer más espacio, puede poner accesos directos y widgets. Haga clic en un espacio en blanco en la página principal y luego deslice la derecha o hacia la izquierda para extender a la derecha o a la izquierda de la pantalla.

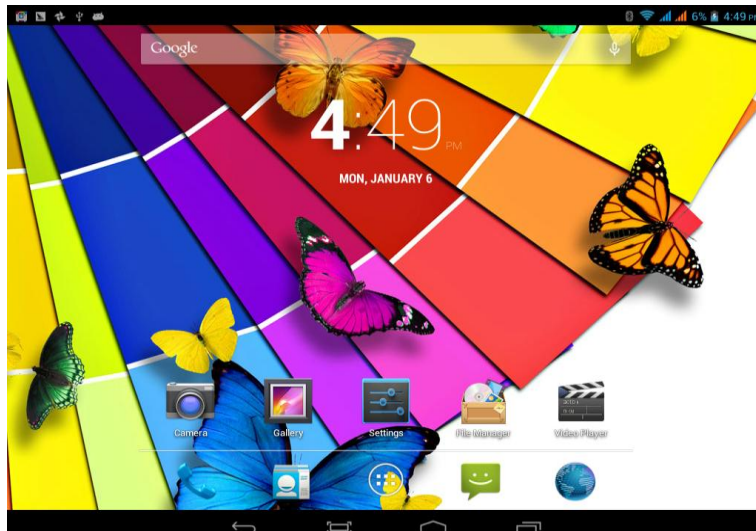

Agregando un icono encima de otro, podrá crear carpetas de iconos.

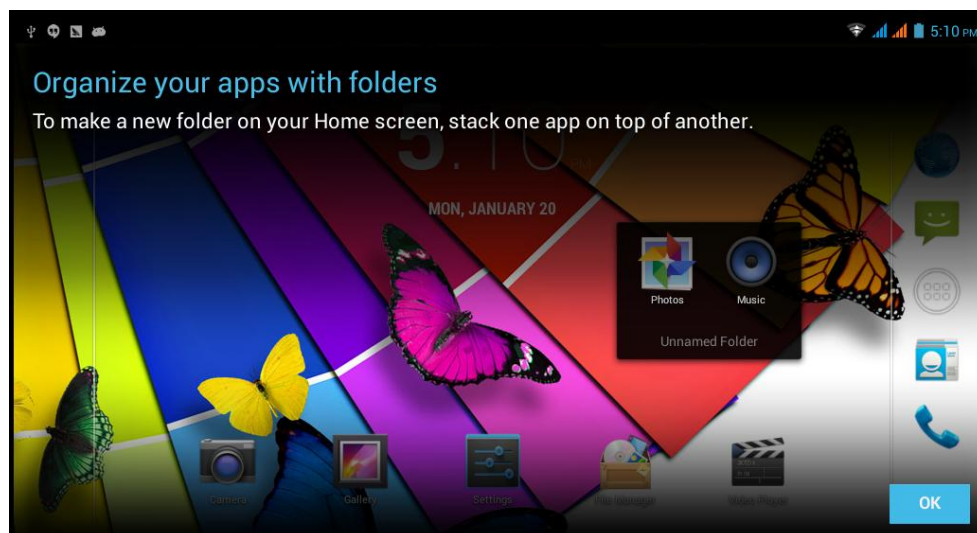

Borrar iconos:

1. Mantenga pulsado los iconos que quiera eliminar, a continuación, en la parte superior derecha de la pantalla, aparecerá el icono de eliminar.
2. Arrastre el icono hasta ella hasta que cambie el color a rojo.


Cambiar el papel tapiz del escritorio:

1. En la página principal, pulse en algún lugar libre y aparecerá una ventana emergente para cambiar el fondo de pantalla.
2. Haga clic en la galería o galería de fondos de escritorio para seleccionar el fondo de pantalla.

VENTANA DE APLICACIONES

Presione el icono de aplicaciones




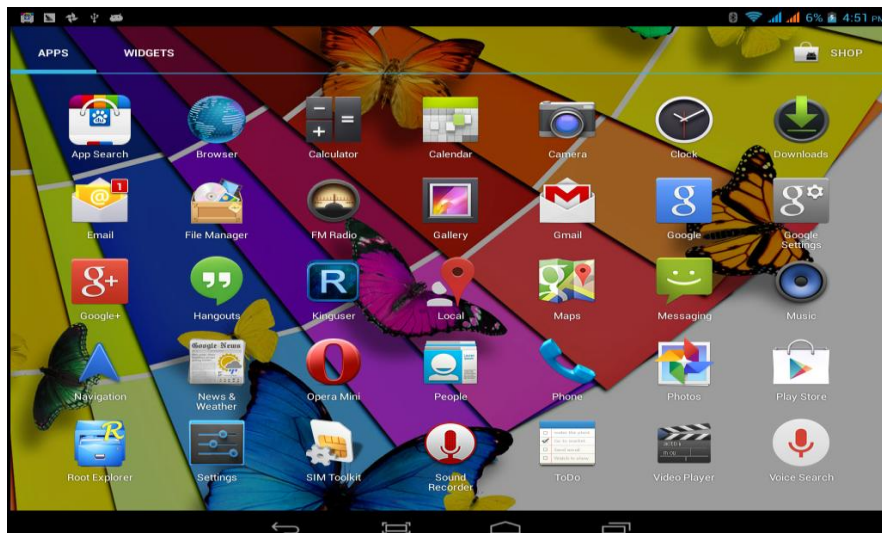

CONEXIÓN USB

Configuración de almacenamiento: Antes de la transmisión de documentos, usted tiene que realizar la configuración de almacenamiento:

1. Conecte el MID y el ordenador mediante un cable USB.
2. Se abrirá la ventana de almacenamiento USB.
3. Seleccione "Activar el almacenamiento USB" y se conectará a su PC.
4. Ahora el USB está conectado correctamente.

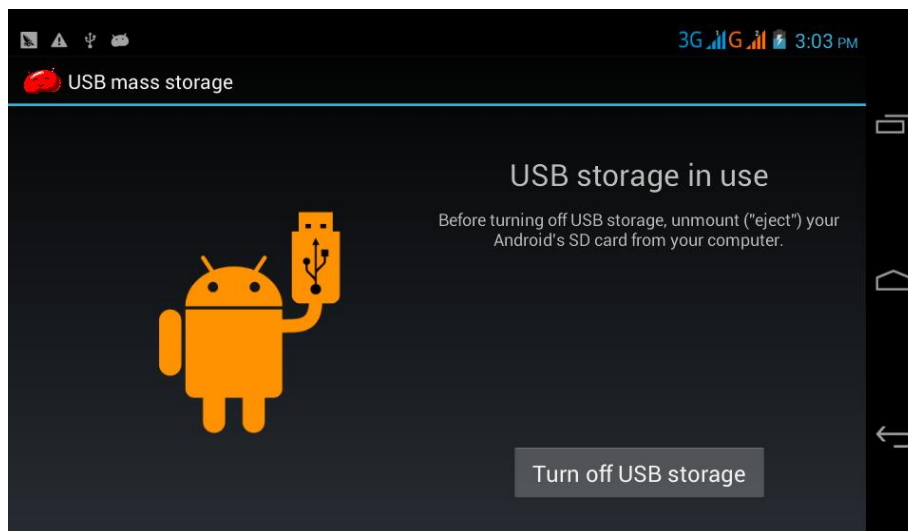

Copia de documentos en la tarjeta de memoria:


1. Conecte el dispositivo a su PC con el cable USB.
2. Seleccione el almacenamiento USB.
3. Abra el "Mi PC" en el ordenador, compruebe las opciones de "disco extraíble" (previamente debe insertar una tarjeta microSD)
4. Copie los documentos que necesita en el "disco extraíble".
5. Una vez terminada la copia, haga cierre la configuración de almacenamiento USB para salir.

Aviso: Cuando se conecte la unidad con cable USB y use la función de almacenamiento, no podrá

ver la información de la tarjeta en la unidad. Sólo tras desconectar el cable USB, puede ver la tarjeta de memoria en el dispositivo.

MÉTODOS DE ENTRADA

Para introducir texto, use el teclado de pantalla. Cuando necesite introducir algún tipo de texto o números, aparecerá el teclado de pantalla. Elija el método de tipificación que desee, seleccione el idioma, etc.

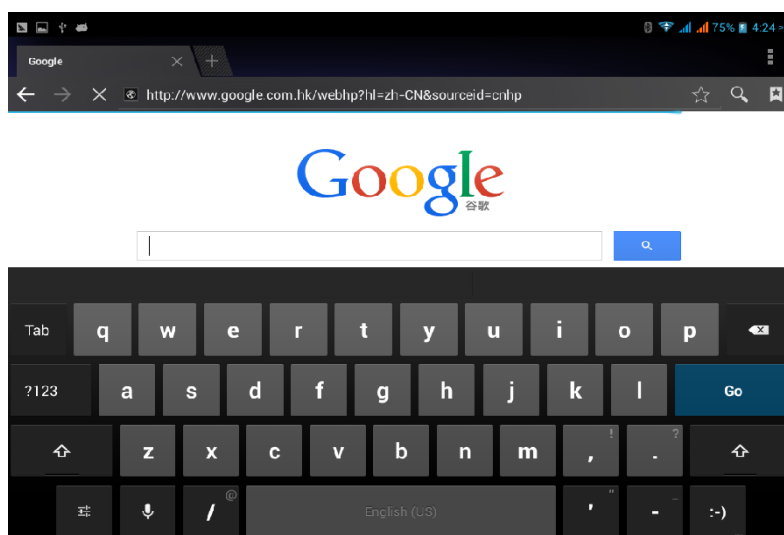


Widgets: En la interfaz de las aplicaciones, haga clic en widgets. Mantenga pulsado cualquier widget para crear un acceso directo y podrá entrar en la aplicación a través del acceso directo

Crear iconos de acceso directo de la aplicación en el escritorio: En la interfaz de la aplicación o interfaz de widgets, mantenga pulsado cualquier icono para cambiar al escritorio de forma automática, arrastrar y soltar el icono, se puede mover a cualquier posición en el escritorio. Recuerde: Si en la posición de destino no hay espacio, el widget no se añadirá en la pantalla principal.


FUNCIONAMIENTO BÁSICO

GESTIÓN DE SIM

Llamadas: Seleccione gestión de SIM y llamadas para configurar las opciones

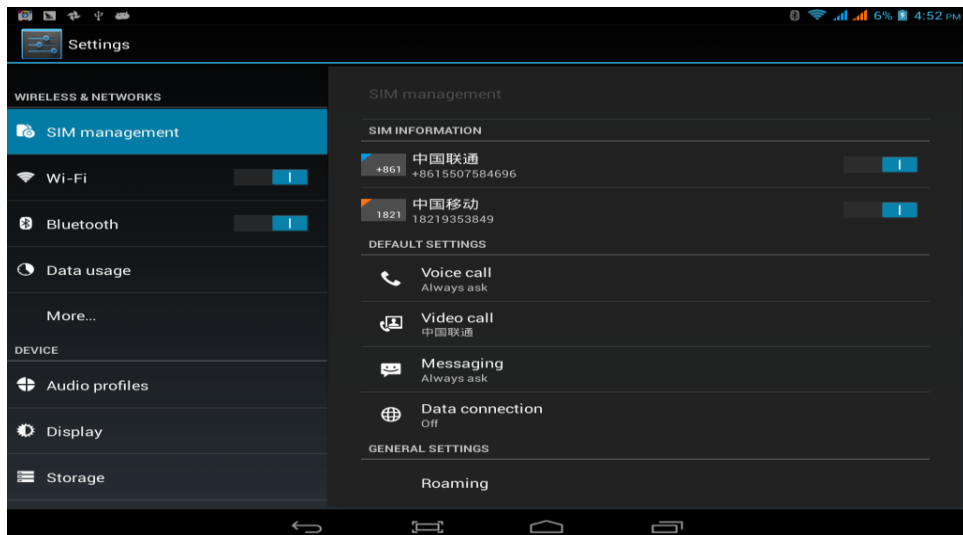


Establezca la SIM por defecto para las llamadas, video llamadas, mensajes y conexión de datos:

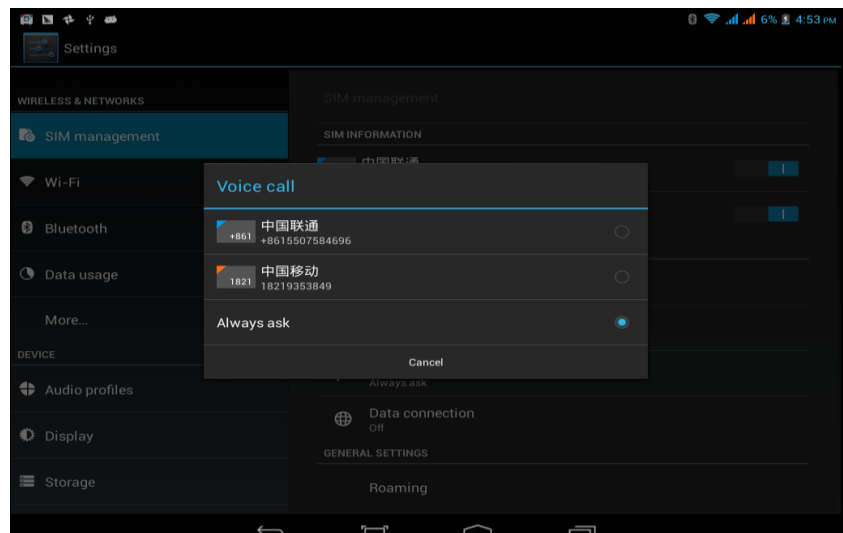


WIFI E INTERNET


Conexión a una red WIFI: En el menú de configuración, active WIFI y el dispositivo buscará redes WIFI disponibles. Seleccione la red deseada, introduzca la contraseña y haga clic en conectar.

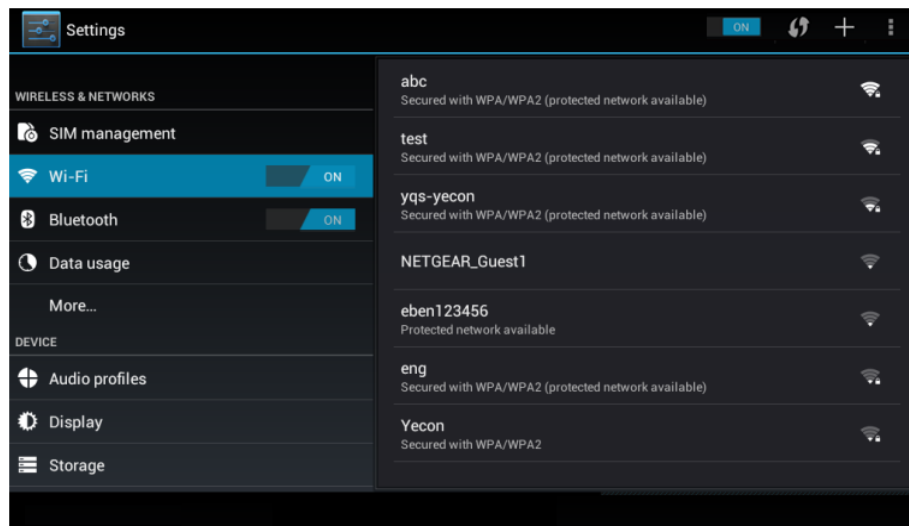

Puede añadir una red WIFI:

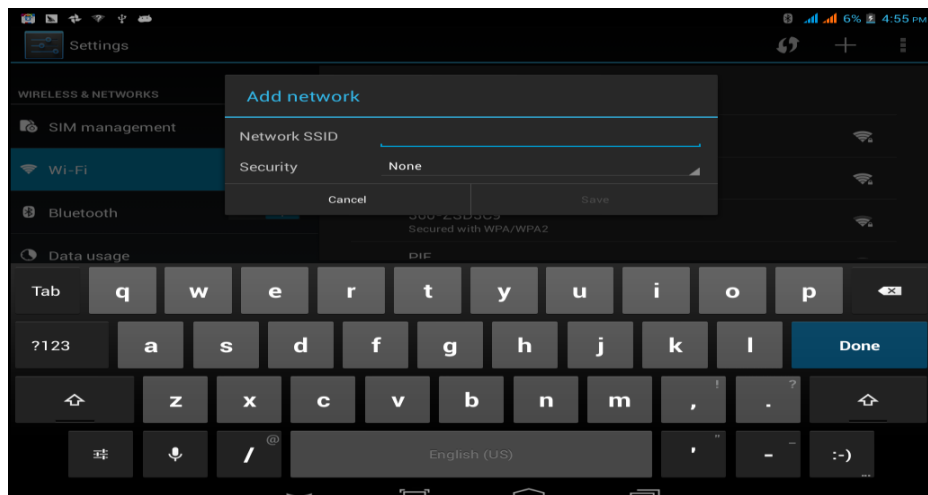


Cada vez que exista una red WIFI a su alcance será notificado. Puede seleccionar mantener activo o no la conexión WIFI durante el modo de espera.

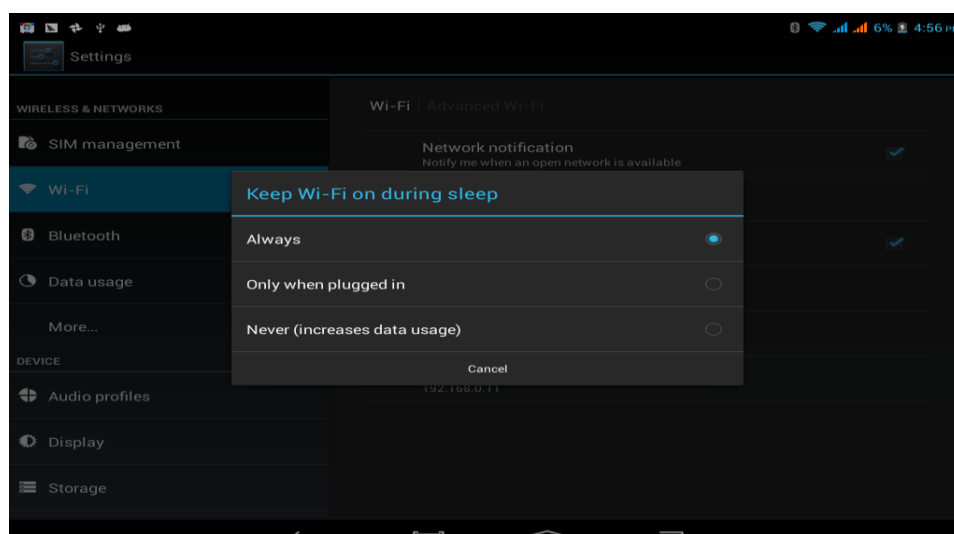


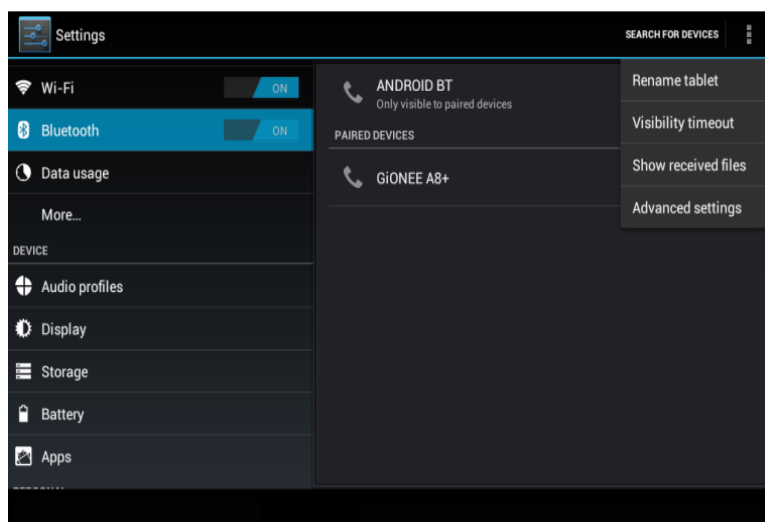
BLUETOOTH

En el menú de configuración, seleccione la función Bluetooth para activarla. Seleccione buscar y buscará los dispositivos disponibles más cercanos.

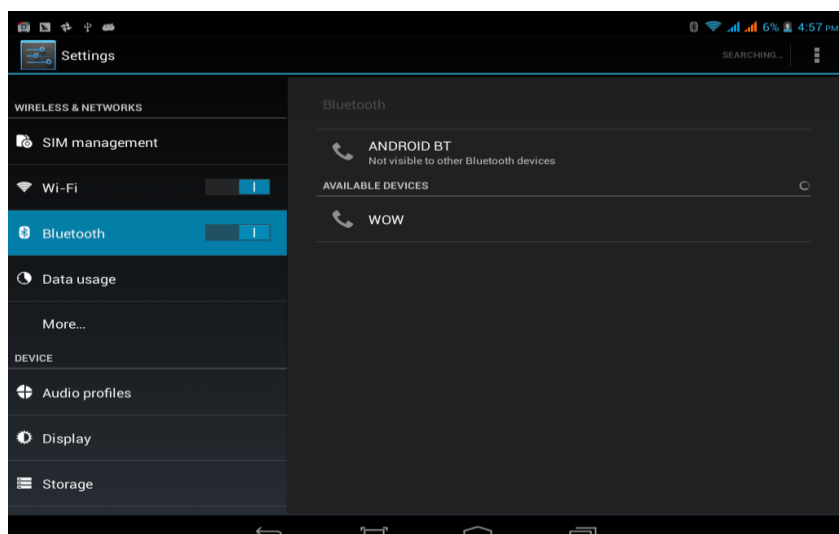


Haga clic en el dispositivo Bluetooth disponible, establezca la contraseña según el dispositivo que está conectando.

Puede cambiar el nombre de su dispositivo para la conexión Bluetooth pulsando el botón de opciones arriba a la derecha :



En el menú de opciones podrá cambiar el tiempo de visibilidad del dispositivo:

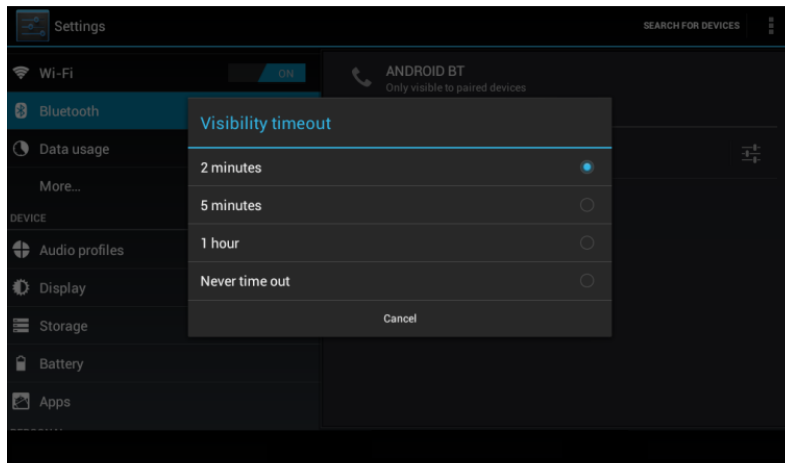


En el menú de opciones podrá seleccionar ver el archivo recibido

CONEXIÓN A REDES – 3G



Seleccione en el administrador de SIM el uso de datos y actívelo para usar los datos en esa tarjeta SIM.

Seleccione “Más...” para acceder a otras funciones:

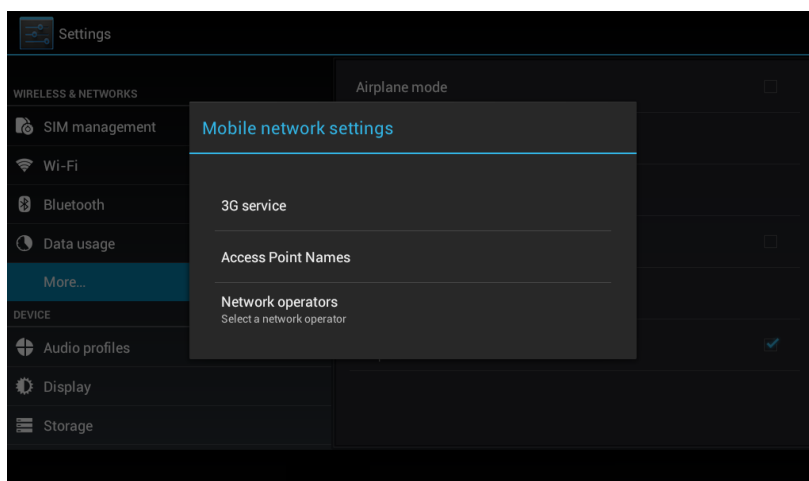


MODOS DE SONIDO

Seleccione Perfiles de audio. Podrá elegir General, Silencio, Reunión o Exterior. El modo General puede personalizarse pulsando en las opciones.

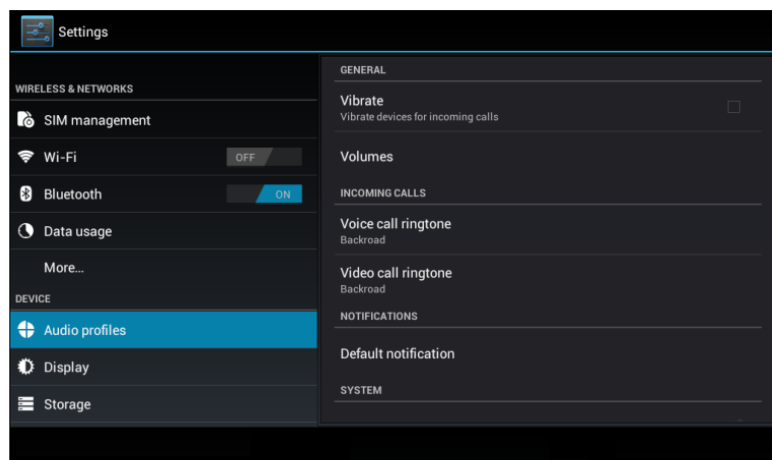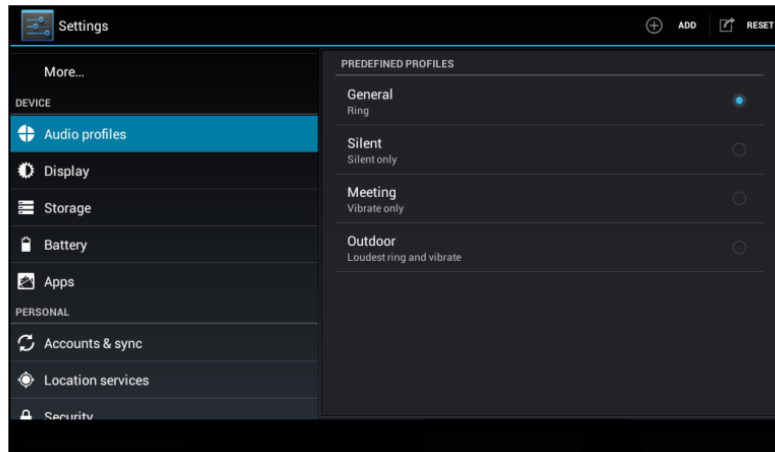

ALMACENAMIENTO

En el menú de ajustes seleccione Almacenamiento. Puede seleccionar la ubicación deseada para ver la memoria ocupada y disponible en cada ubicación.

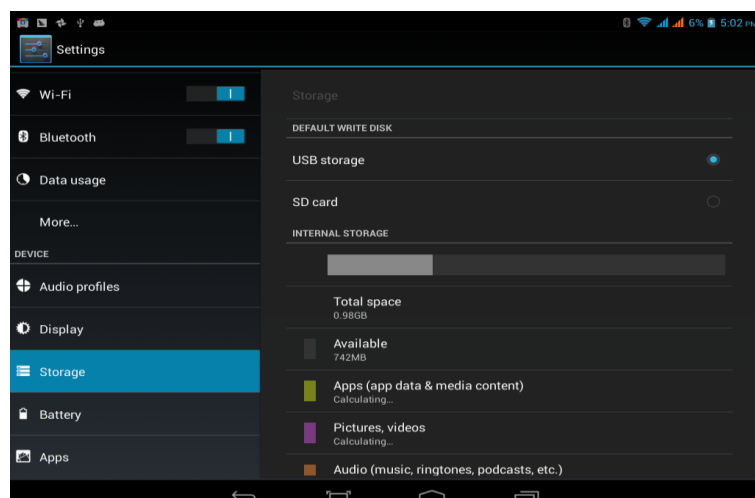

Memoria interna: En la memoria interna, al pulsar sobre Aplicaciones, podrá acceder a los datos de cada aplicación, así como a la gestión de las mismas.

Tarjeta SD: Si inserta una tarjeta SD podrá gestionar la información instalada en ella desde este

menú.


APLICACIONES

En el menú de configuración seleccione Aplicaciones. Podrá ver las aplicaciones en diversos menús como Descargadas, Almacenamiento USB, En ejecución o Todas. Pulsando sobre cada aplicación podrá acceder al menú de cada aplicación.



CUENTAS Y SINCRONIZACIÓN


Una vez cargada correctamente la cuenta Gmail, acceda a Google en el menú de configuración:

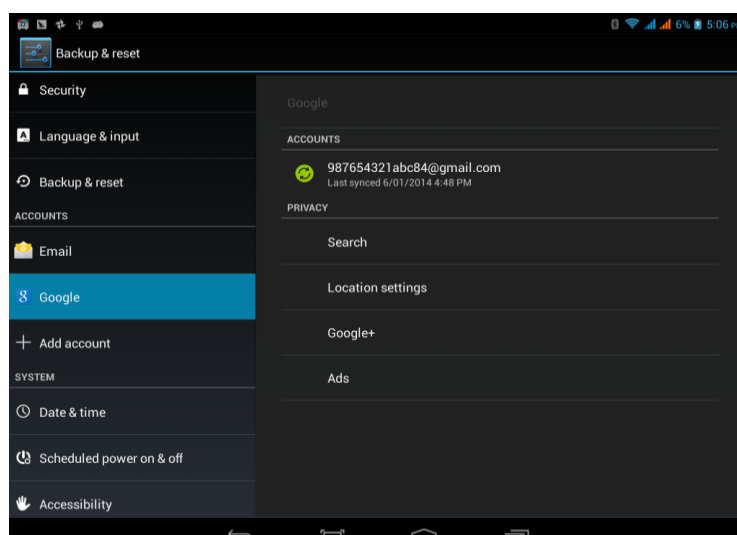

Seleccione la cuenta y en el menú de opciones seleccione sincronizar ahora.

SERVICIOS DE LOCALIZACIÓN

Seleccione en el menú de configuración, Servicios de localización (Acceso ubicación).

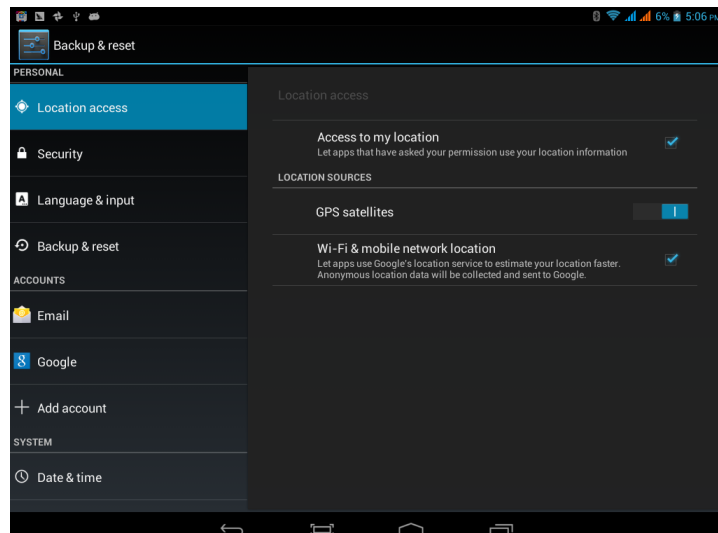

Podrá seleccionar la forma de mostrar la ubicación.

SEGURIDAD


Bloqueo de pantalla: puede bloquear la pantalla para proteger la el inicio del sistema con iconos de desbloqueo o una contraseña. Puede elegir entre deslizar la pantalla (sin seguridad), bloqueo facial, patr5ón de bloqueo, PIN o contraseña.

COPIA DE SEGURIDAD

Conéctese a una red Wifi o use la conexión de datos, acceda a su cuenta de Google, seleccione copia de seguridad de mis datos en los servidores de Google.

En su dispositivo, seleccione Copia de seguridad y Copiar mis datos. Seleccione la cuenta de Gmail que va a usar para copiar los datos.

Para restaurar el sistema a los datos de fábrica, seleccione Restablecer datos de fábrica.

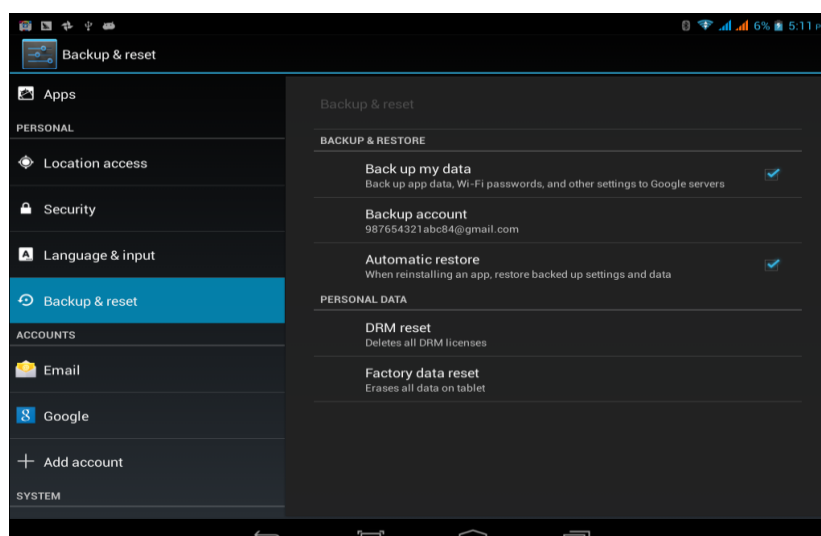

FECHA Y HORA

En el menú de configuración seleccione fecha y hora. Puede seleccionar que la fecha y la hora se

establezcan automáticamente según la red o GPS. Para introducir la fecha y hora de forma manual debe desactivar esta función.

TIEMPO DE INICIO Y CIERRE DEL SISTEMA

En el menú de configuración seleccione Programar encendido y apagado. Establezca en ON la hora de encendido y el OFF la hora de apagado. Y seleccione su activación en la parte derecha de la pantalla.

ACCESIBILIDAD

Podrá establecer diversas opciones para facilitar el uso del dispositivo y la navegación por Internet. Entre las opciones podrá establecer mensajes sonoros para ayudar a personas con alguna discapacidad visual, ajustes en el sintetizador de voz, cambiar la configuración de las pulsaciones en pantalla, etc.

OPCIONES DE DESARROLLO

Diversas opciones del desarrollo del dispositivo como:


- Depuración USB: Para ajustar la conexión entre el dispositivo y un PC
- Pantalla Activa: La pantalla no entra en modo de suspensión al seleccionar esta función.
- Mostrar pulsaciones: Mostrará en pantalla cada sitio pulsado.
- Ubicación del puntero: Mostrará el recorrido de la pulsación
- Etc.

INFORMACIÓN TABLET

Muestra información sobre la versión, información legal, etc.

MULTIMEDIA

CÁMARA: Seleccione la cámara pulsando en el icono de la cámara en el menú principal.

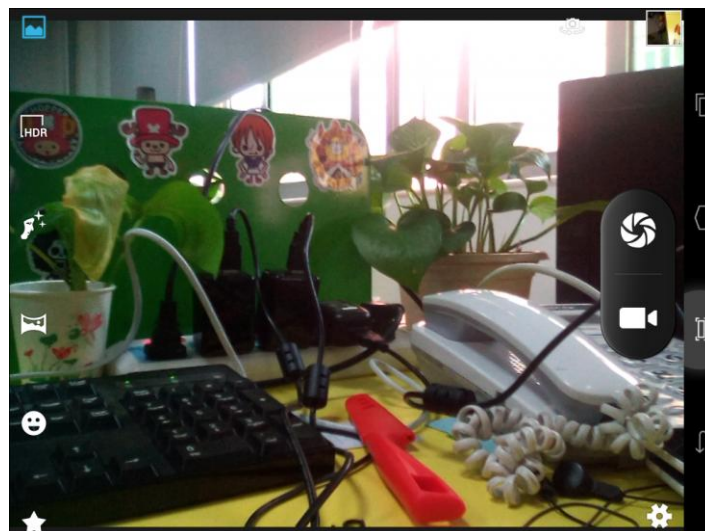


Deslice la barra de la parte izquierda para ver las funciones de la cámara de fotos.

Para realizar una foto pulse el botón de la parte derecha. Para realizar una grabación de vídeo pulse el icono de la cámara de vídeo.

En el botón de ajustes podrá encontrar otras opciones configurables.

RADIO FM

En el menú de aplicaciones seleccione "Transmisión FM"

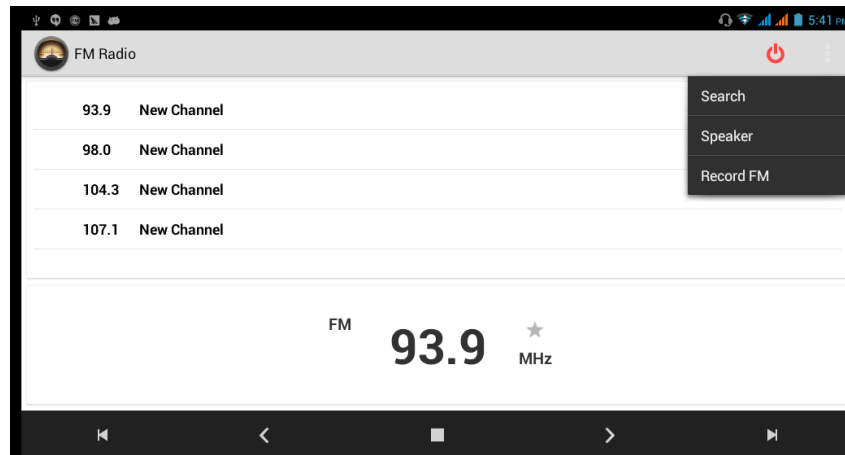

Se mostrará la frecuencia actual en el centro de la pantalla. EL botón de la estrella permite añadir la estación a la lista de emisoras guardadas.


En la parte inferior de la pantalla se encuentran los botones para pasar de frecuencia y pausar la reproducción.

En la parte superior izquierda podrá desactivar la función y acceder al menú de ajustes.


NOTA: Necesita introducir unos auriculares para que hagan de antena.

COMUNICACIÓN


TELÉFONO: Seleccione el icono del teléfono para realizar llamadas. Para el uso como teléfono use unos auriculares.

MENSAJES DE TEXTO: Pulse el icono de mensajes 

Accederá al menú de edición de mensajes de texto:

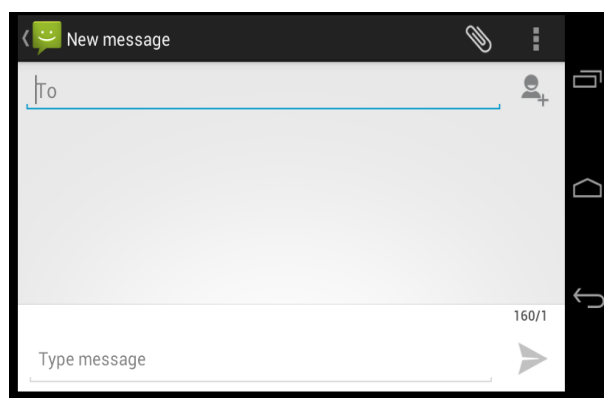

LISTA DE CONTACTOS: Seleccione el icono 

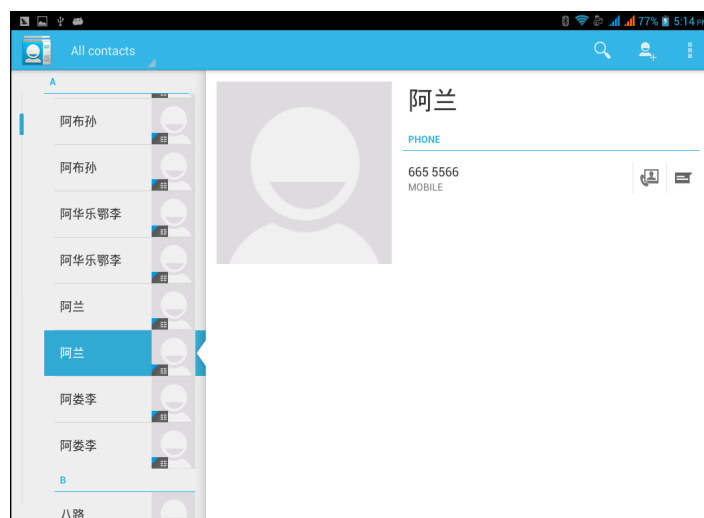


Podrá buscar contactos, añadir contactos, etc.

INTERNET

NAVEGADOR

Una obtenga conexión Wifi o tenga insertada una tarjeta SIM que permita el uso de datos, abra el navegador:

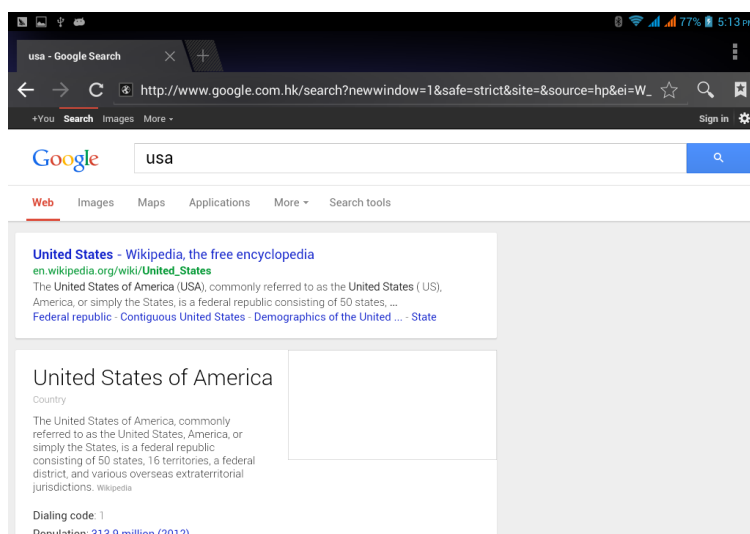

Haga clic en la barra de direcciones para introducir el sitio web, para navegar por la información del sitio. Podrá hacer clic en el menú de opciones para actualizar, guardar en favoritos, compartir, marcadores, ver el historial, etc.


GPS

En la barra de notificaciones, presione hacia abajo la parte derecha y seleccione GPS para activarlo.

Además los programas que requieren saber el posicionamiento pueden requerir activar el GPS a través de ellos.


OTRAS FUNCIONES

ADMINISTRADOR DE ARCHIVOS: Permite copiar, cortar, eliminar y cambiar el nombre los archivos o la ubicación que estos tienen. También desinstalar aplicaciones. Seleccione el icono de Administrador de archivos:

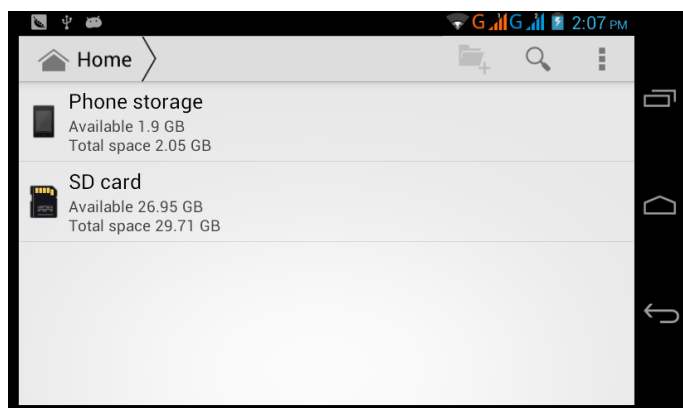

GRABADORA

En el menú principal haga clic en el icono de la grabadora

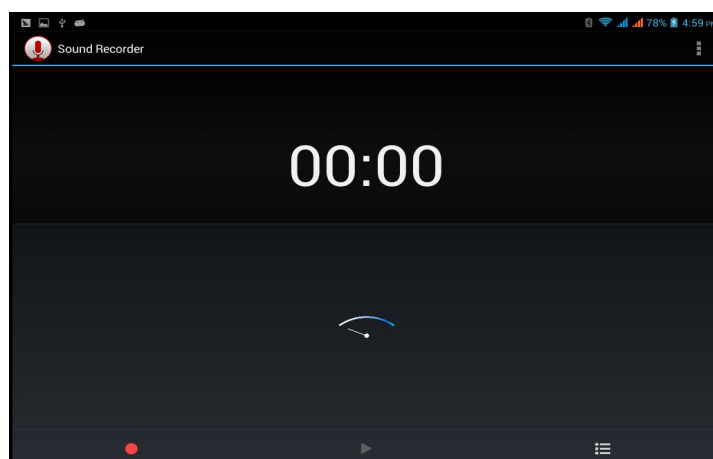

Haga clic en el icono rojo para comenzar la grabación. Pulse el botón “stop” para parar y el botón “play” para reproducir la grabación.

PROCEDIMIENTOS DE INSTALACIÓN

Para instalar software externamente, debe asegurarse que contiene la extensión APK. Debe instalar este archivo dentro del dispositivo.

"Las especificaciones pueden cambiar sin previo aviso"



IMPORTADO
FERSON ELECTRÓNICA, S.A.
CIF: A-41111881
SANTA CLARA DE CUBA 12
SEVILLA
ESPAÑA

DECLARACIÓN DE CONFORMIDAD

Ferson Electrónica, S.A. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN60950-1:2006/A11:2009/A1:2010
EN 62311: 2088
EN 301 489-1 V1.9.2:2011-09
EN 301 489-17 V2.1.1:2009-05
EN 300 328 V1.7.1: 2006-10
ETSI EN 301 489-1 V1.9.2(2011-09)
ETSI EN 301 489-17 V2.1.1(2009-05)

Descripción del aparato:

Modelo BTPC-970QC3G
Dispositivo de conexión a internet



BRIGMTON

surfing technology



www.brigmton.eu



BRIGHTON

surfing technology



INSTRUCTION MANUAL

TABLET PC 9.7" IPS-HD 1280x800-3G
QUAD CORE-3G-GPS-WIFI-BLUETOOTH-A 4.4

BTPC-970QC3G-B-N

CONTENT

Safety Instruction

Introduction

- Preparation

- Status Icons

Quick Start Guide

- Keys Function

- Start-up and Shutdown

- Open and Close the Screen

- Usage of Touch Screen

- Main Interface

- Visit Application Procedures

- USB Connection

- Words Input

- Application Technique

Basic Setting

- SIM Card Management

- Wireless and Internet

- Bluetooth

- Mobile Networks

- Contextual Model

- Storage

- Application

- Account and Sync

- Location Service

- Security Setting

- Backup and Reset

- Date and Time

- Fixed-time Start-up and Shutdown.

- Assistance Function

- Engineer Selection

Multi-Media

- Camera

- FM Radio

Communication Function

- Phone

- Text Message

- Contact List

Internet

- Browser

GPS Function

Other Application Procedures

- File Manager

- Recorder

Installation of Procedures

SAFETY INSTRUCTION

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.
- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the MID or using airplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.
- Never use the MID in bathroom or other humid environment, and

INTRODUCTION












PREPARATION

Battery Charging: If this navigator is first used, please use AV adaptor to fully charge it.

Apply the power adptor to charge for MID.






STATUS ICONS

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Setting button & Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available
	Screen Shoot button		

QUICK START GUIDE

KEYS FUNCTION

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	Increase the volume
Volume - (down)	Decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	Can set the system and other menus & display recently browsed history
Shot screen button 	Shoot any screen and save

STARTUP AND SHUTDOWN

Startup: Long press POWER key for three seconds, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown: Long press POWER, it will popup shutdown window.


Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options. Click Shutdown is the last step.

OPEN AND CLOSE OF THE SCREEN

Screen will be closed on its own when no operation happens.

Screen will be closed on its own if no operation happens for some time to save battery power
When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed: If the screen is closed, short press POWER to open the screen.
The screen will be locked open it, it will show the below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

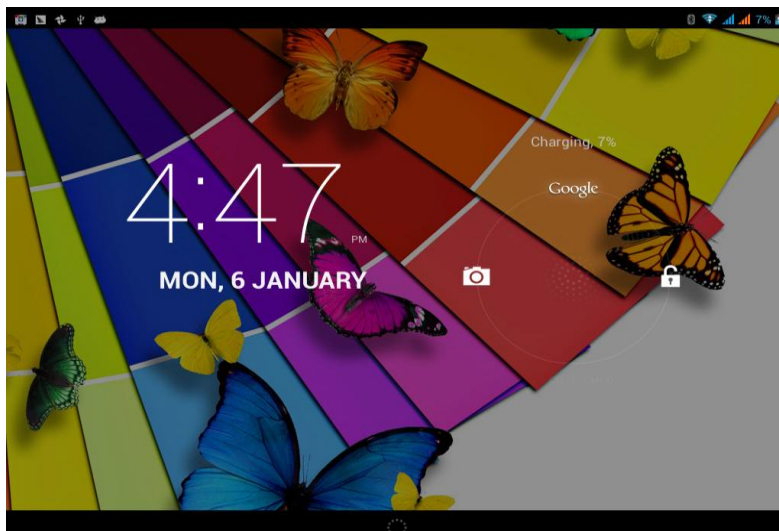

USAGE OF TOUCH SCREEN

MID operating methods: There are below methods to view the main screen, menu and application procedure in your MID.

Click: When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on: If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.


Pull: Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate: For most pictures, you only need to rotate the MID sideways to change the screen


direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

HOME PAGE

Main interface as below picture, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

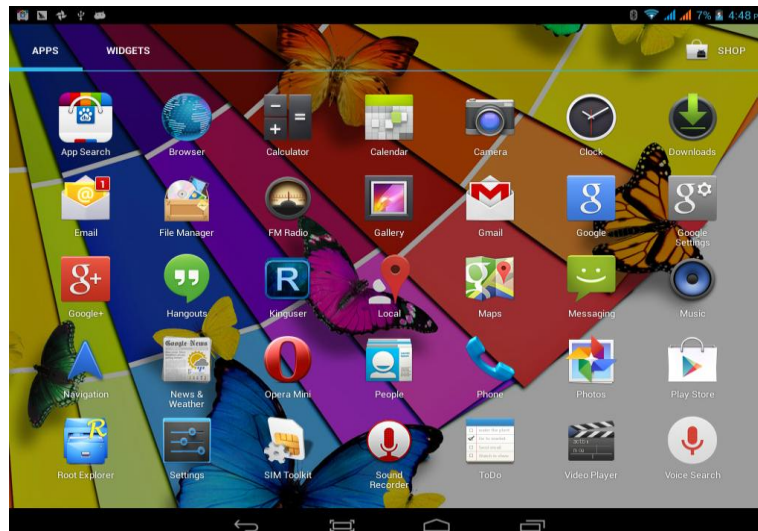

The extended home page: The home page can be extended beyond the width of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures.

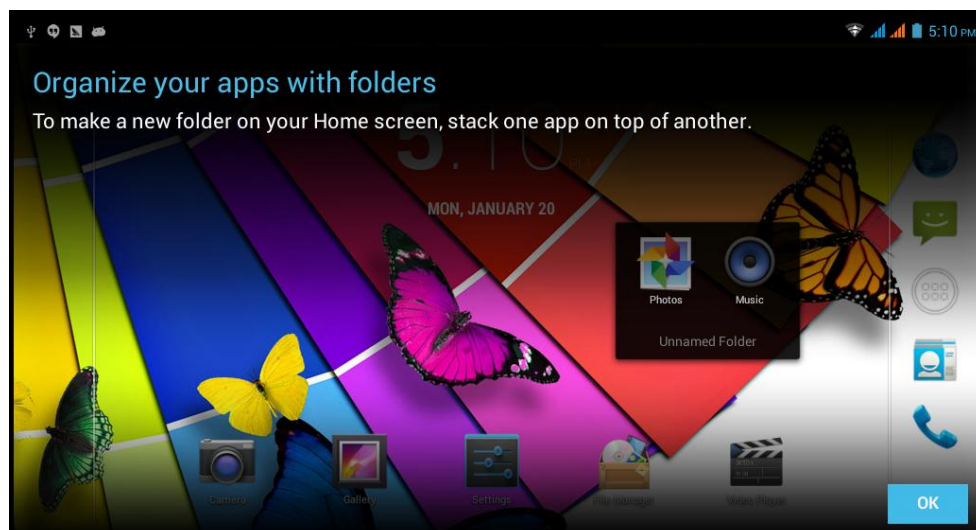

Remove the icons in desktop

- Long press the icons need to be remove, then on the right above of the screen, it will appear remove icons.


- Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.


Change the wallpaper of desktop

- In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.

- Click the gallery or wallpaper gallery to select the wallpaper.

VISIT APPLICATION PROCEDURES


Click  to enter into main interface, choose the application procedure you want to visit.

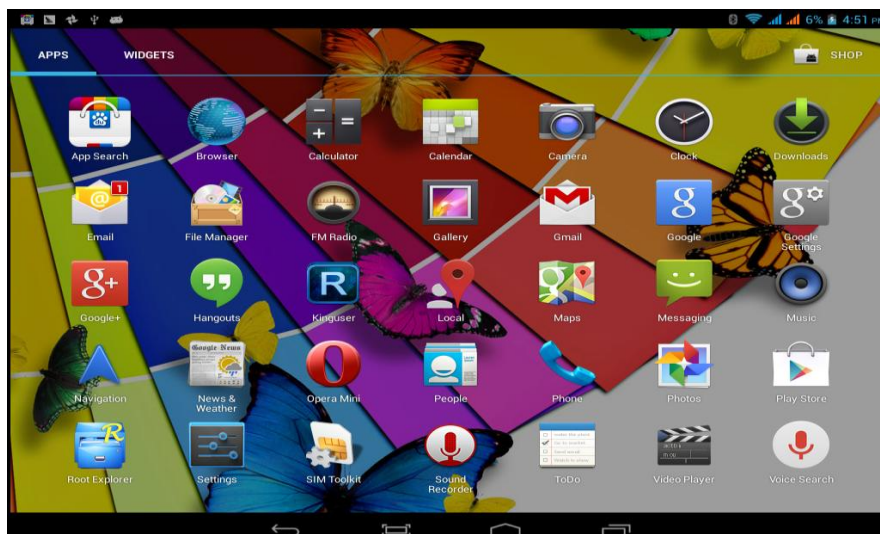

USB CONNECTION

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the "USB Connected", then click "open USB storage configuration".
4. Now the USB is connected successfully.

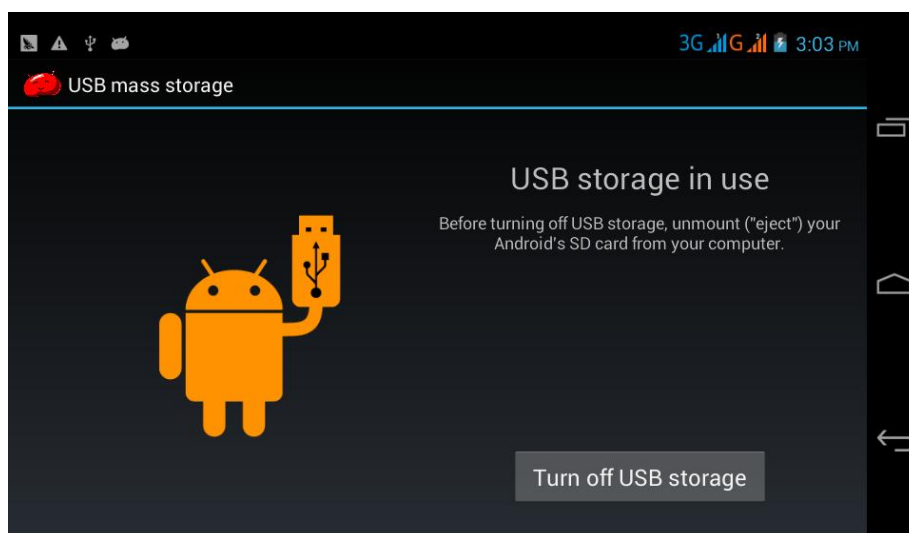

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the "My computer" in your computer, check the items in "removable disc".
4. Copy the documents you need into "removable disc".
5. After copying finishes, click "shutdown the USB storage configuration" to uninstall.


Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

TYPING WORDS

Use the screen keyboard: When you start the procedure or choose the words or numbers edition, it will show the screen keyboard.

Choose the typing method you want

1. Click Setting pocedure application.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

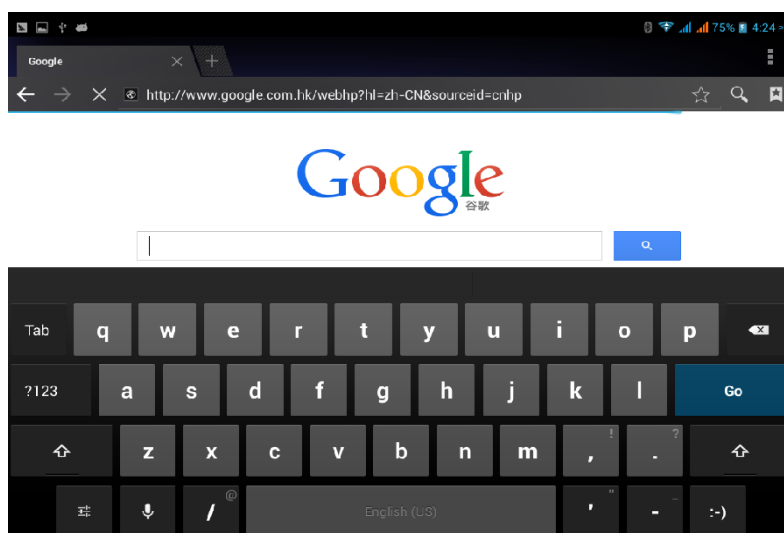

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left of the cursor.

OPERATION TECHNIQUE

Enter widgets interface: In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.


Create application shortcut icons in the desktop: In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.


BASIC SETTING

SIM MANAGEMENT

Voice call: Click settings in main menu, choose SIM Management:

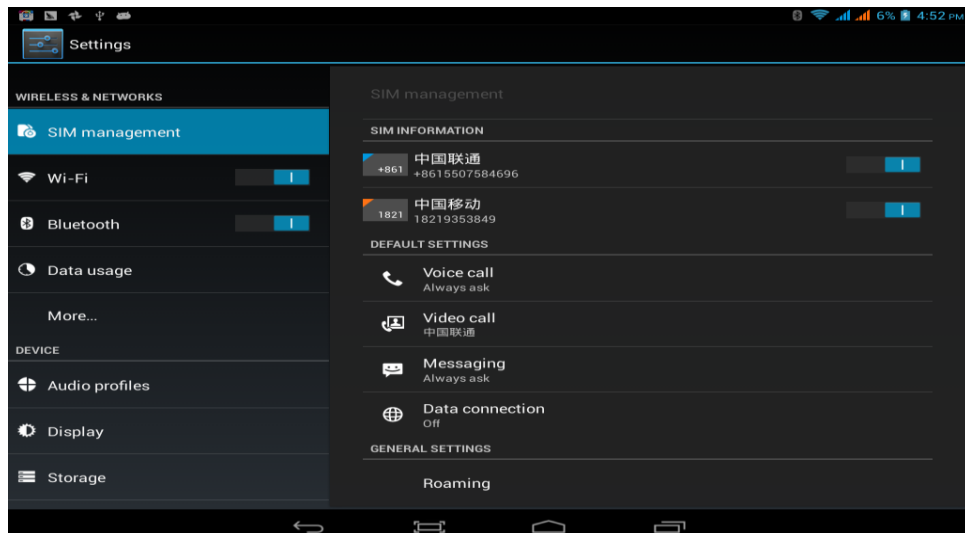

Click voice call, choose defaulted SIM card.

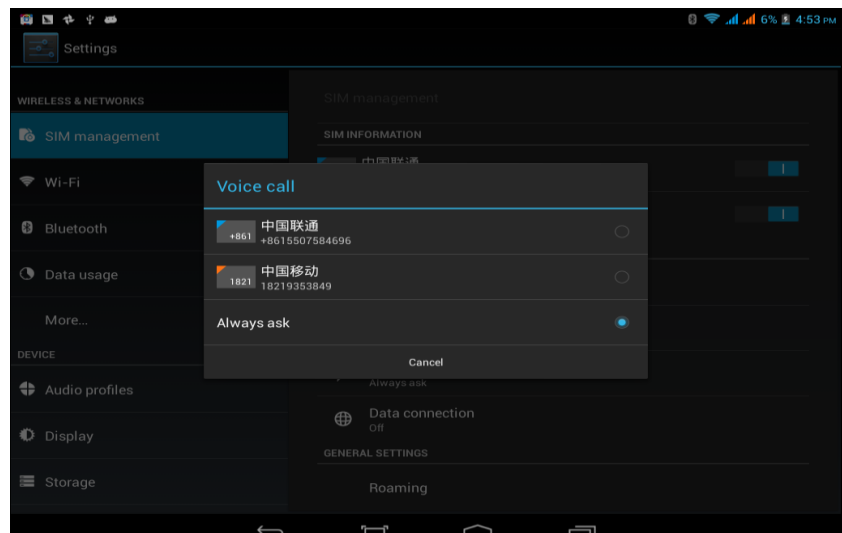


Video Call: Click settings in main menu, choose SIM Management, and click video call, choose defaulted SIM card when makes video call.

Message: Click settings in main menu, choose SIM Management, click message, choose the defaulted SIM card when sends message.


Data Connection: Click setting application in main menu, choose SIM management, click data connection, and choose the defaulted SIM card.

WIRELESS AND INTERNET


- In the main menu or interface, choose **setting** application procedure.
- Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet.
- Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

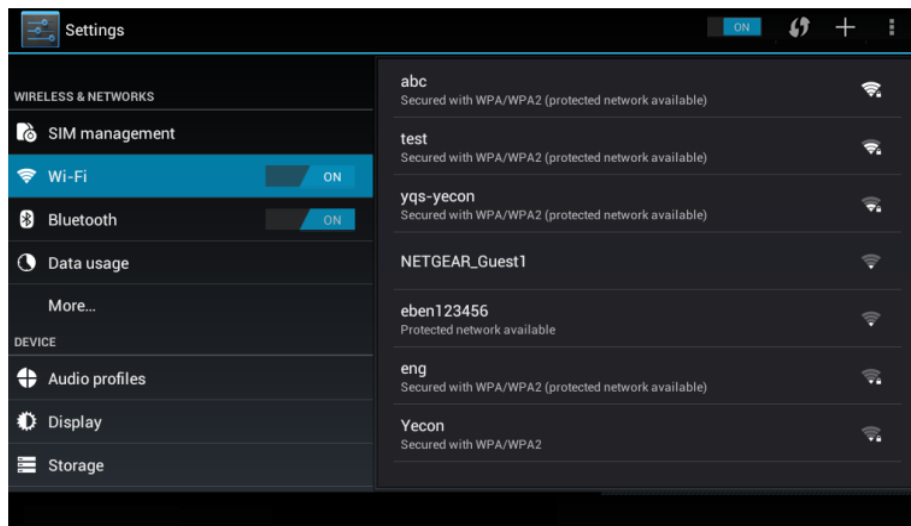

Add Network: Click **ADD NETWORK** icon in right top

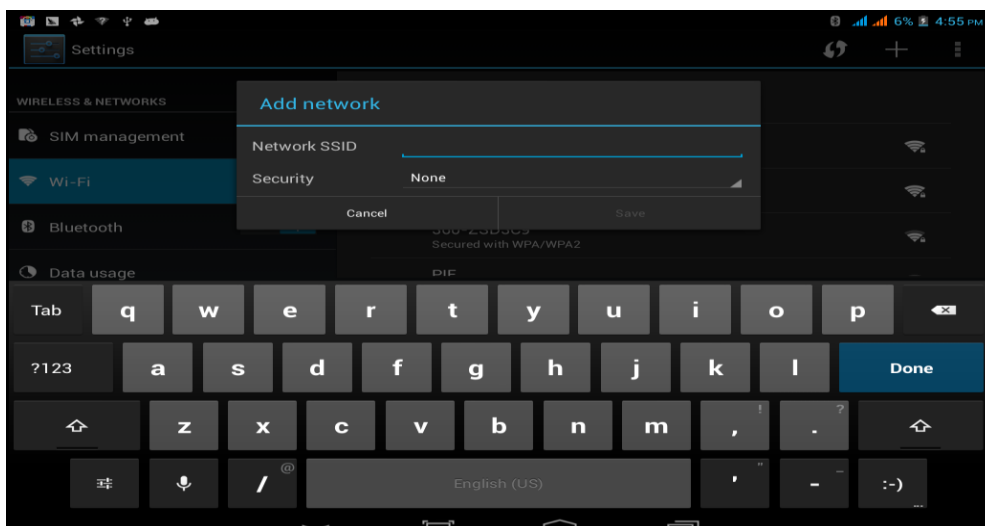


- Input network SSID, the wireless network name, click save.
- Click user name already saved, click connect to use network.

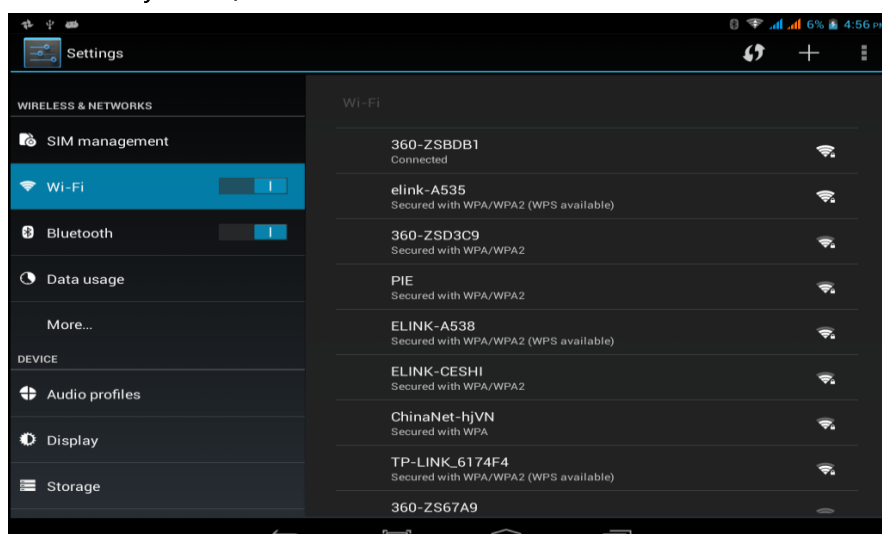

Network Notice: If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network.


Keep WI-FI on during sleep: Click  icon in right top of, select advanced.

Click Keep WI-FI on during sleep:

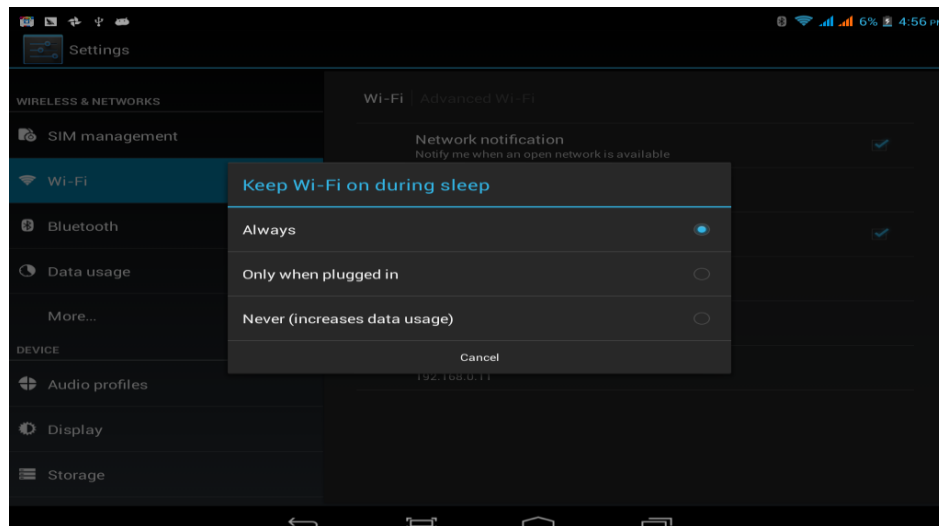


BLUETOOTH

- Click setting application in main menu interface
- Click bluetooth and open it.
- If somebody open bluetooth in your surroudings, click search device in right above, then MID will automatically search the bluetooth device nearby.

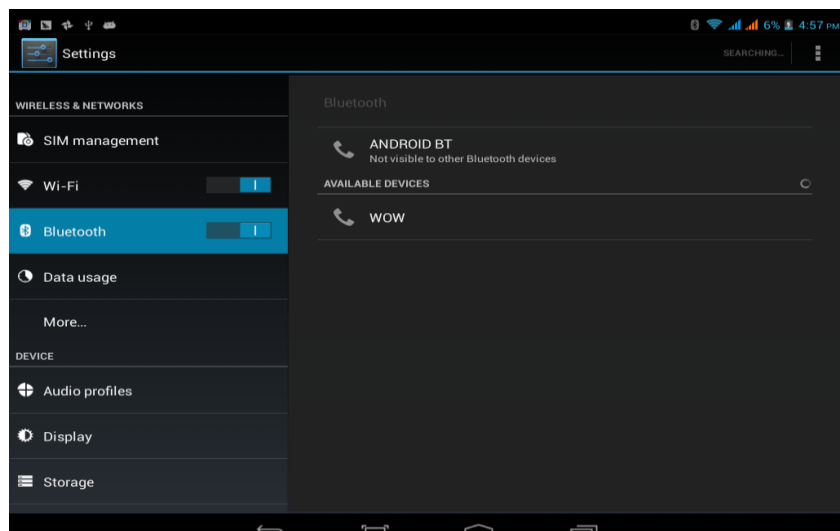


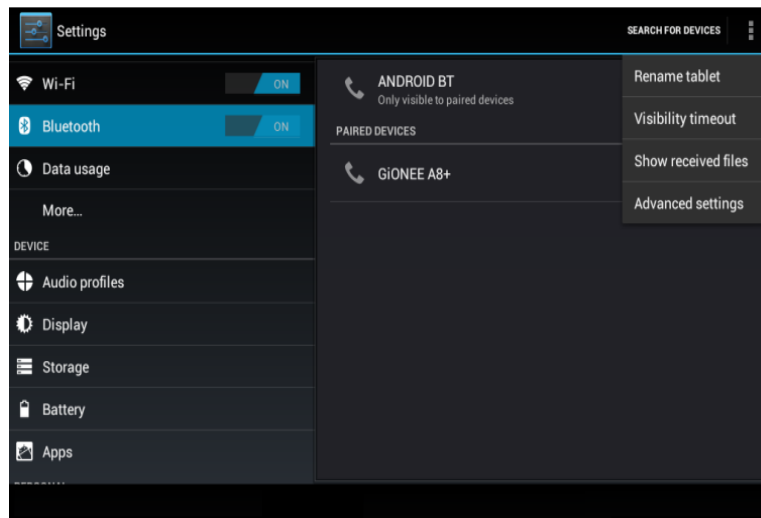
- Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.

After match successfully, choose the operation you want to, click  to go Bluetooth options.


Bluetooth setting

Rename tablet

Click  icon in right top, select rename tablet, you can rename it as you want




Check visibility timeout: Select visibility timeout setting. Choose the time you want to set:

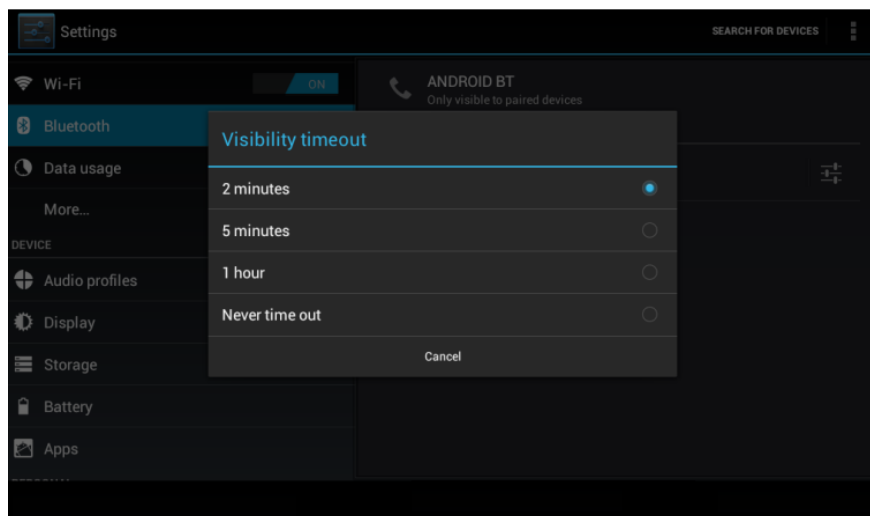

Display the file you received: Choose display the file you received, you can view download and upload files.


Bluetooth advanced setting: Choose Bluetooth advanced setting.

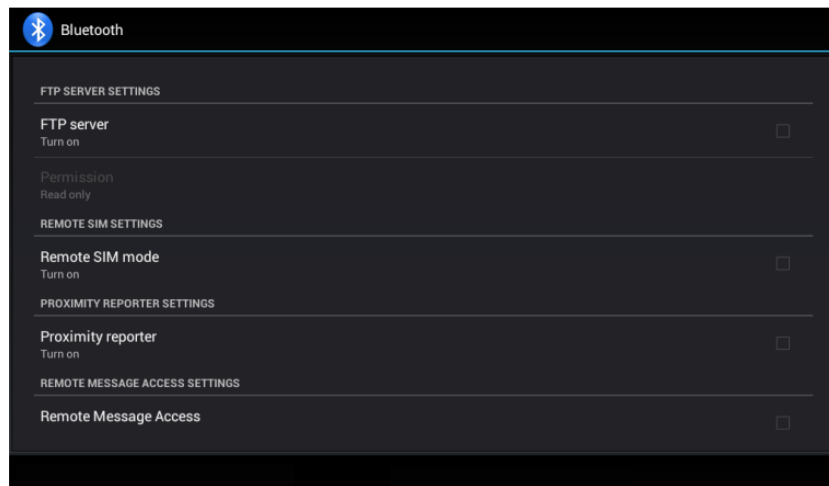

- File transmission: Open file transmission service. Connect Bluetooth FTP and customer device to visit and operate the file.
- Bluetooth distance induction device: Open Bluetooth distance induction device, when two Bluetooth devices distance is quite far or connection is cut off, the Bluetooth will remind you with sound.


MOBILE NETWORKS

Network Operator: Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network:

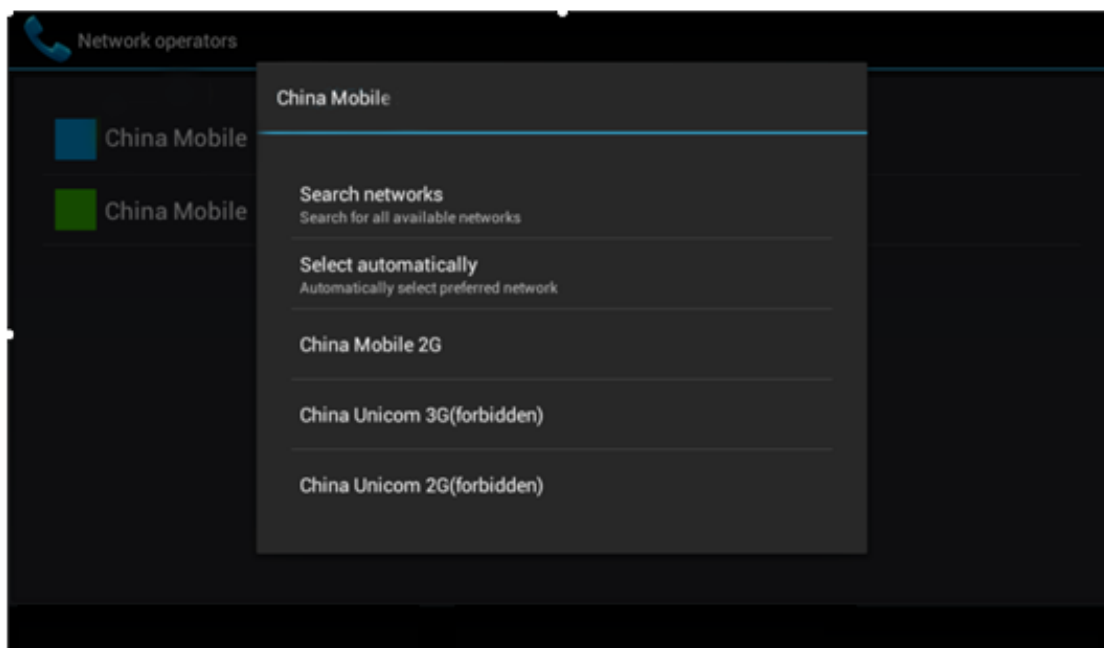


CONTEXTUAL MODEL

- Open settings, click contextual model:

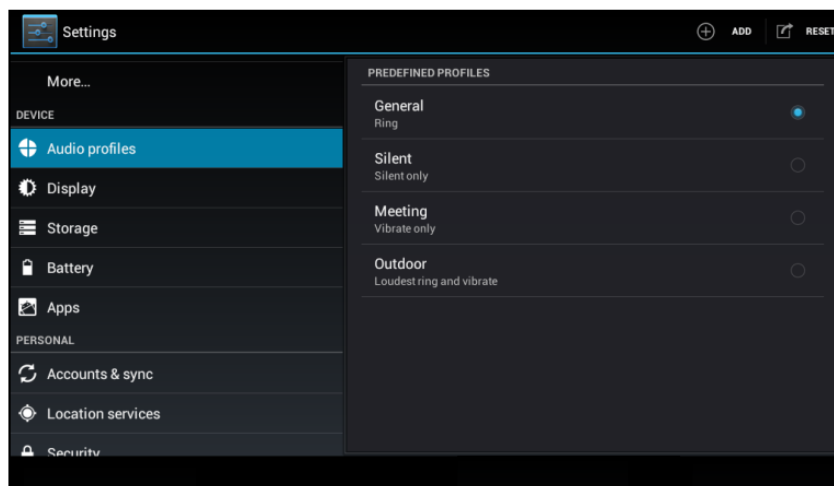

Click **standard** to enter into:

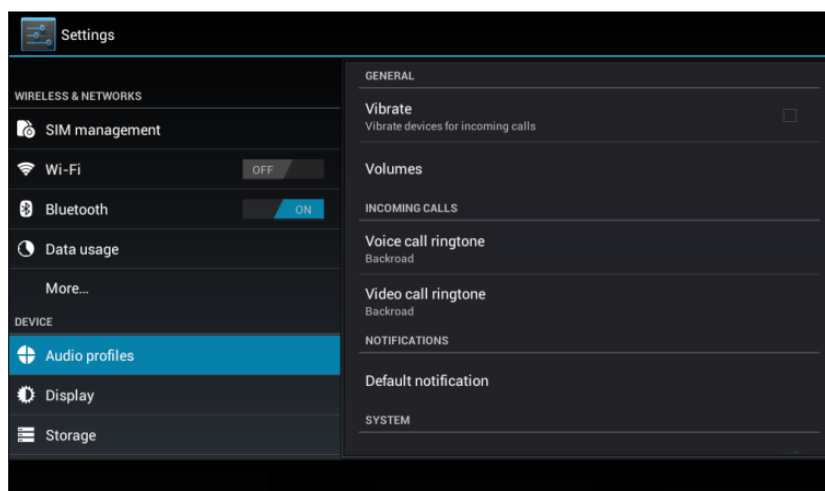


STORAGE

Open setting function, click memory, click preferred install location, you can choose install new application to choose preferred install location.


Check SD card and MID storage space.

- Enter into setting application.

- Click storage, check storage space: System storage is the space MID leave for system file, it can't be viewed.

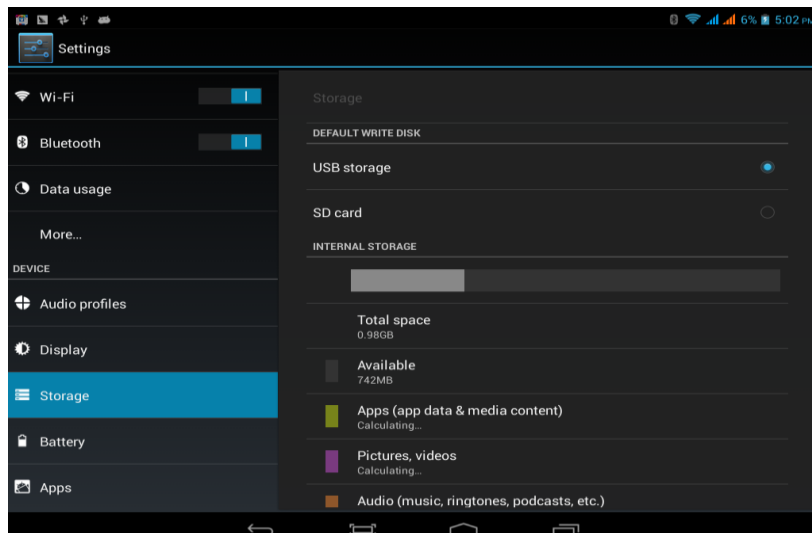


Internal storage: Internal storage is MID local NAND storage, if you need to check the storage content, you can check it in main menu.

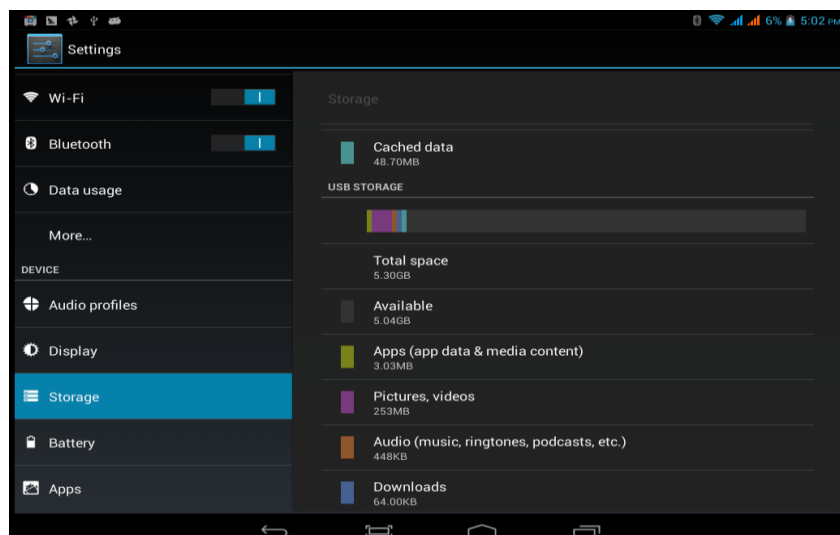


SD card: You can check storage space, SD card available space, unmount SD card and erase SD card

APPLICATION PROGRAM


- Click setting application in Apps.
- Select application, after enter, you can manage and delete installed application and check system used storage space and left space.

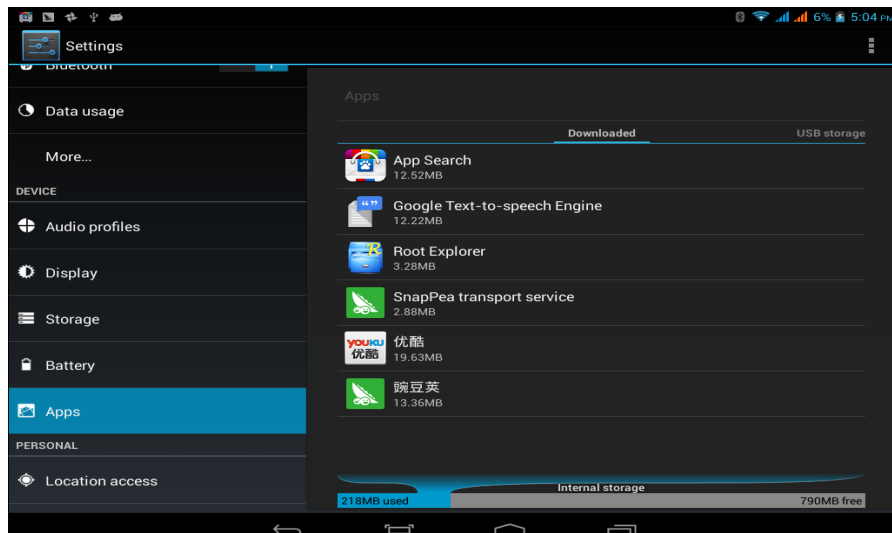

- View internal storage used space and left space.

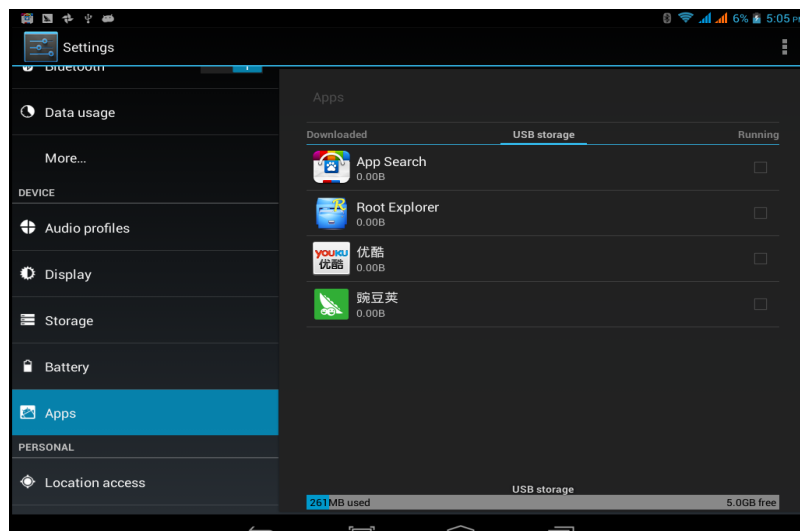


View the working device, used space and available space.

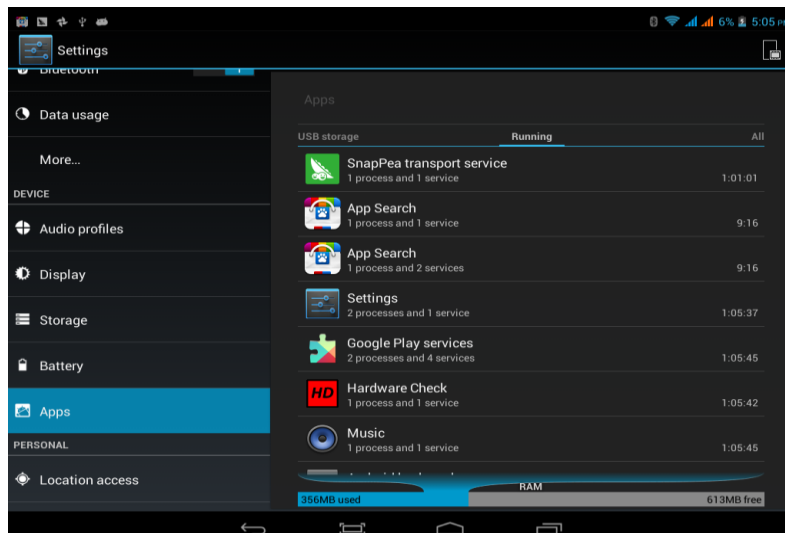


ACCOUNT AND SYNC

After successfully load, it will open the sync function.

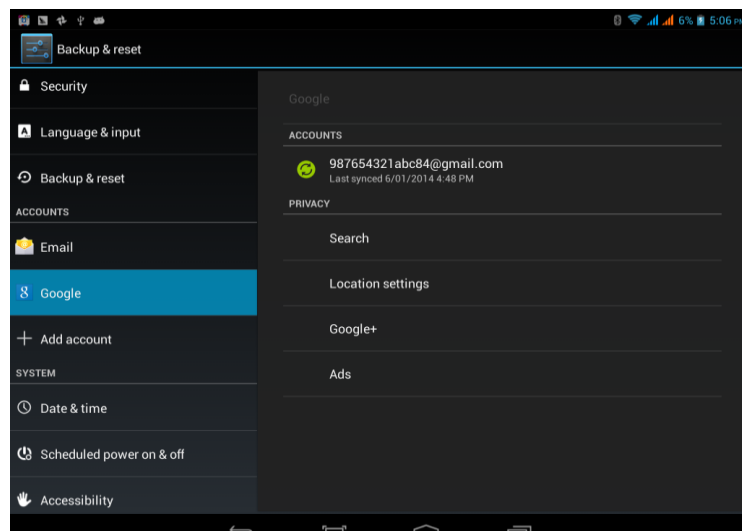

LOCATION SERVICE

Click setting, select location service.

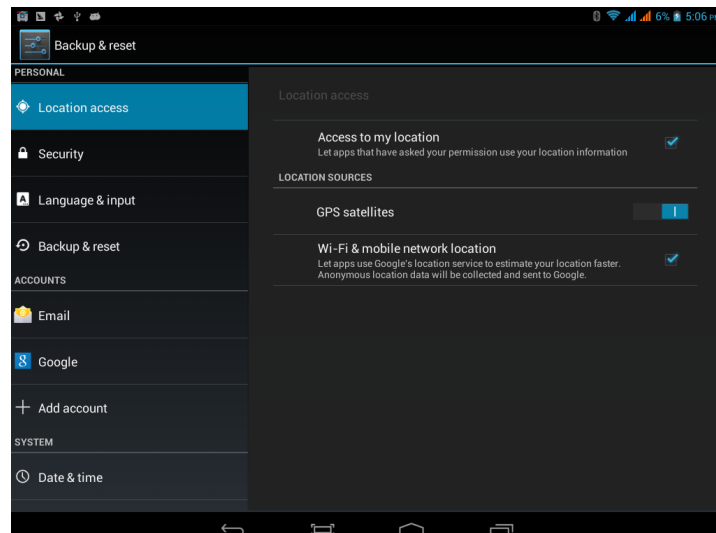

SAFETY SETTING

Set locked screen: Lock the touch screen by unlock icon or password to protect your MID.


Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

- Click setting application in main interface.
- Click safe.
- Click locked the screen.
- Choose picture in text setting area.

Click next following the remind message.

- The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As picture, move your finger from the screen when finish. The system will record your new unlock pattern.
- Click continue.
- When you see the reminder, enter the unlock pattern, then click confirm.

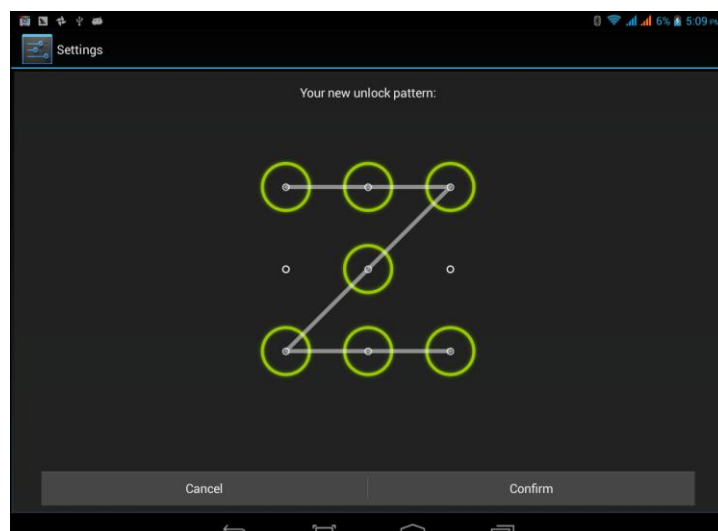

Set unlock PIN code


1. Click setting application in main interface.
2. Click safe.
3. Click screen locked.
4. Choose PIN in text setting area.
5. Enter new PIN code(numbers) and click continue.
6. Enter new PIN code again and click confirm.

Set unlock password

1. Click setting application in main interface.
2. Click safe.
3. Click screen locked.
4. Set password in text setting area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click confirm.

Unknown source


1. In main interface, click setting.
2. Click safety.
3. Click unknown source

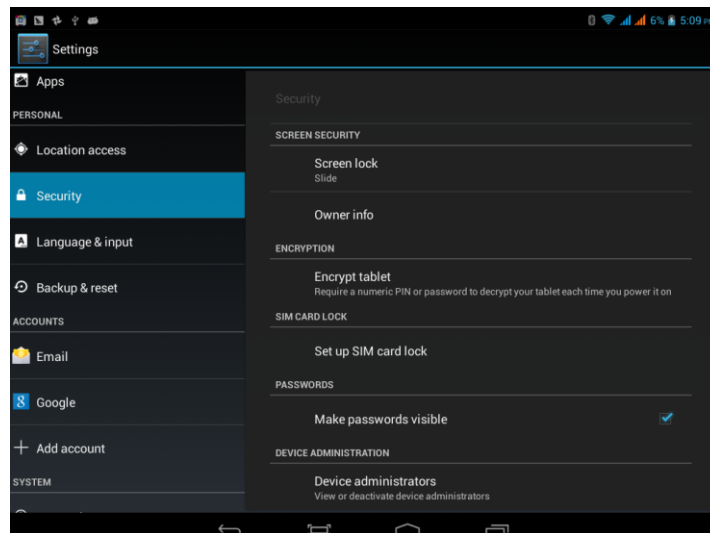

BACKUP AND RESET

Connect WIFI and login your google account, choose **backup my data**, system will backup your data into google server.

If you need to recovery factory reset, please click reset, if you need to formulate NAND, please click reset tablet.

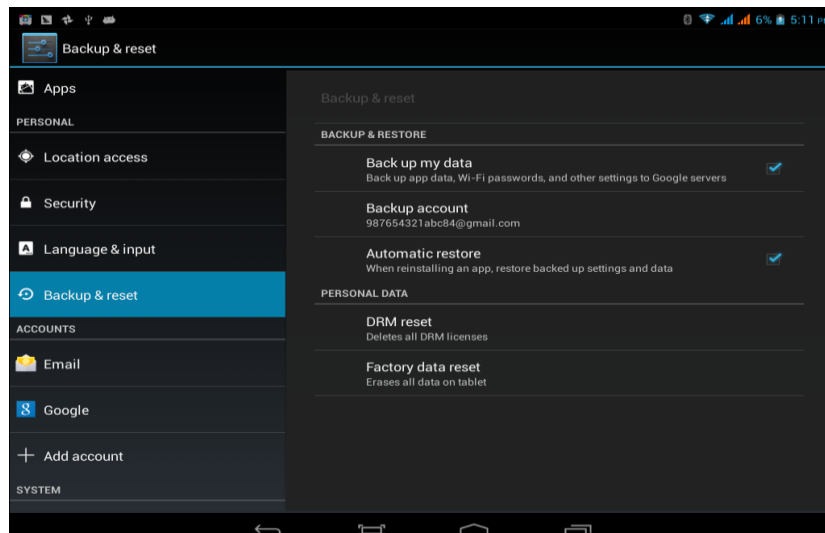

DATE AND TIME

According to the preset, system will voluntarily apply the date, zone, and time provided by internet. Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click date and time.
3. Turn off "auto setting of date and time".
4. Turn off "auto setting zone".
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click Date setting, then click upper or down button to adjust date, month, and year, click setting when you finish selection.


Fixed-time Startup and Shutdown

1. Click Setting application procedure
2. Click fixed-time startup and shutdown.
3. Operate as below picture



ASSISSTANCE FUNCTION

Touch and hold delay: Click touch and hold delay to increae time.

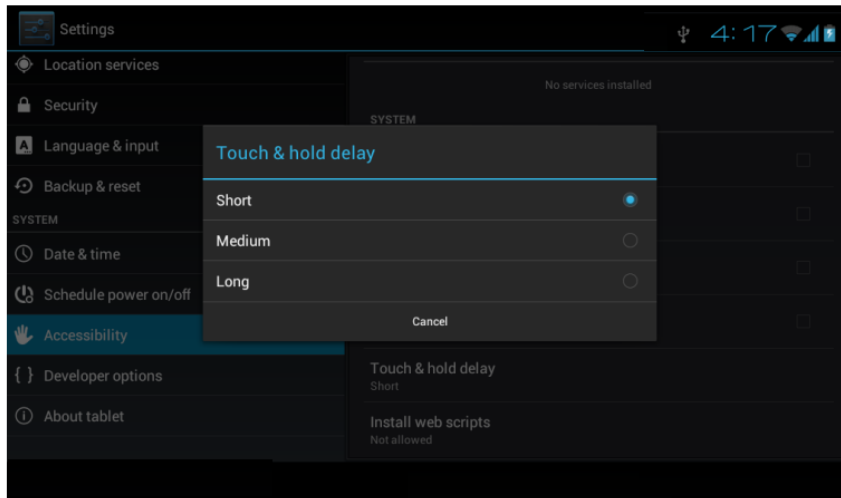

Install webpage script

It will allow you install webpage scrip when you open system,, but it will increase the risk when you are browsing webpage.

ENGINEER SELECTION

USB adjustment: After opening USB adjustment, you can use some software to read MID software, but when USB adjustment is turned on, USB storage needs to manual adjust.

Keep awaken state: If you open keep awaken state, it will never auto sleep when your MID is charging.

Pointer Location: If you open pointer location, it will display touch vertical and horizontal direction.

Show touches: If you open display touch screen operation, it will display touch opeation on the screen. It is suggested to use with same direction as pointer location.

Show screen update: If you open screen refresh, it will display related area when the area is refreshing.


About Tablet: Check MID state

- Check Setting application.
- Click about tablet, check state message, model, Android version, version No and so on.
- Click state message, check battery state, battery volumne, SIM state, IMEI number, IP address.

MULTI-MEDIA


CAMERA: IN THE MAIN INTERFACE OR DESKTOP, CLICK CAMERA APPLICATION PROCEDURE, ENTER INTO CAMERA


Operation of camera: Switch camera: choose Menu key, click switch front/back camera:

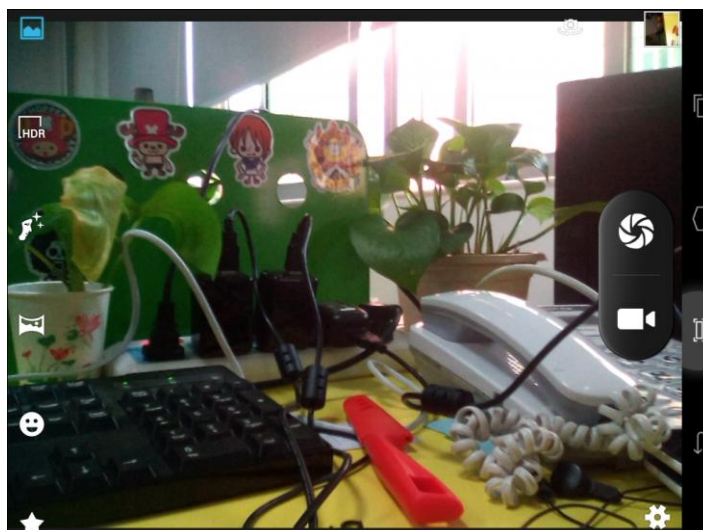

FM RADIO

CLICK ON FM RADIO ICON IN THE MAIN INTERFACE OR DESKTOP TO ENTER INTO FM RADIO INTERFACE:

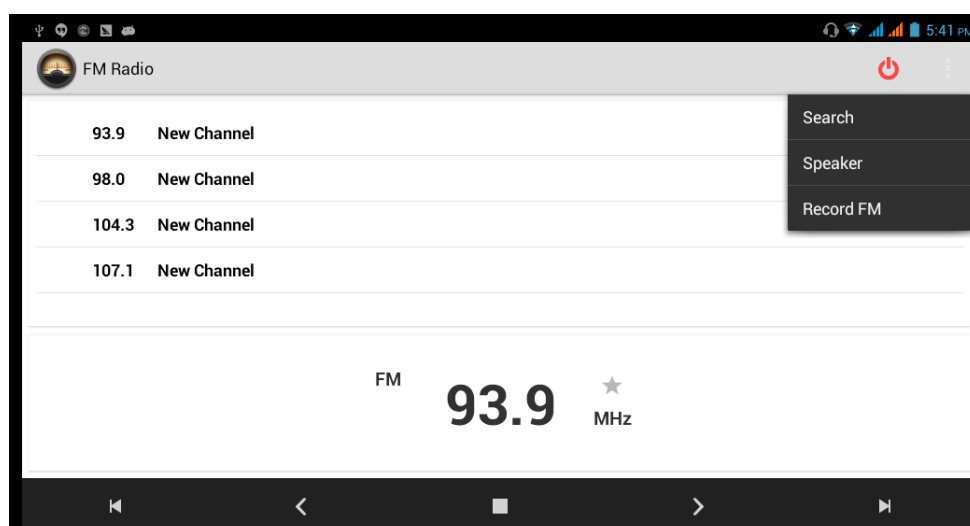


Save channels: Click  button in the main interface to save the channel, and the channel will be saved in channels list.


Note: You need to insert earphone as antenna when using FM radio, if no antenna, your MID can't search any frequency band.

COMMUNICATION FUNCTION


PHONE: Click Phone application procedure

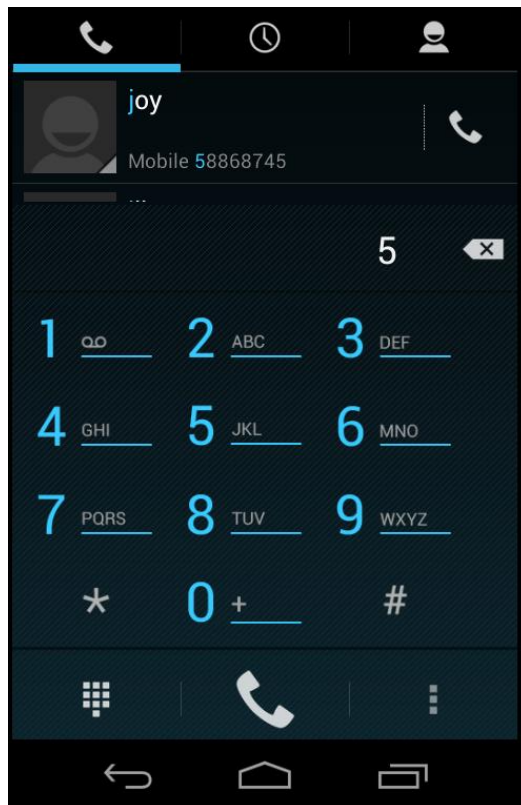


TEXT MESSAGE: Enter into main menu, choose message application procedure.
Click "Edit new message"

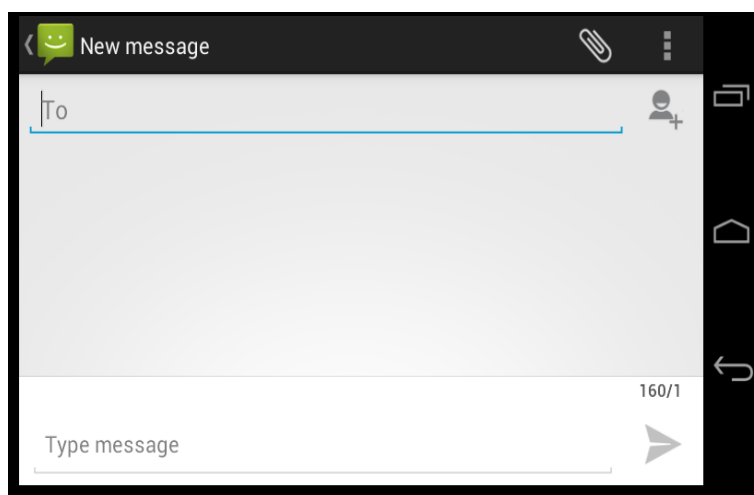


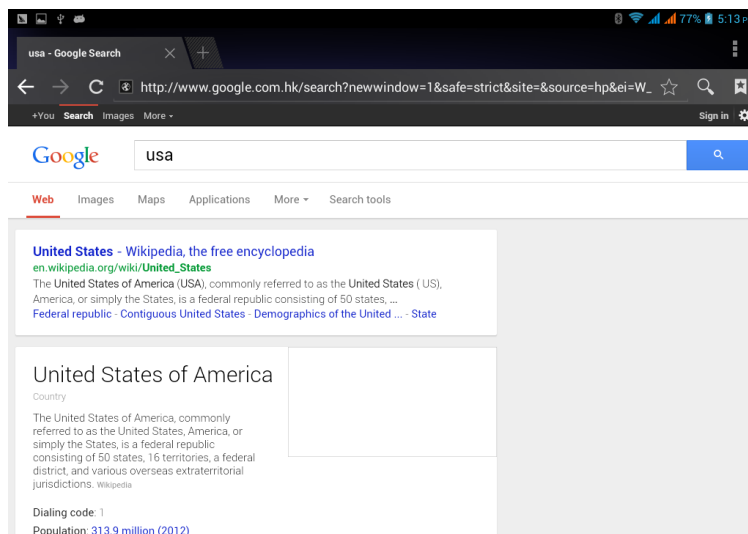
CONTACT LIST

Click Contact list  in the main interface, enter into the contact:

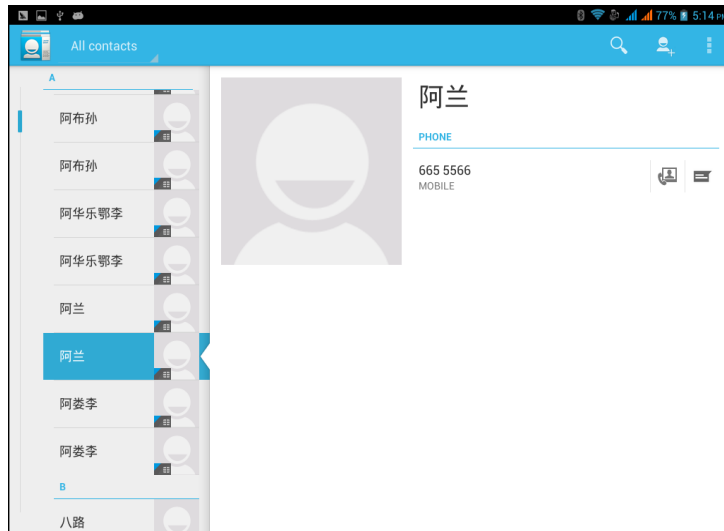

INTERNET


BROWSER: In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface:




Click address bar to input the website, click start, enter into related webpage, then you can browse the website information and you can click the menu you can refresh ,save to bookmarks, share page, bookmarks, history and setting the webpage.

OTHER APPLICATION PROCEDURES


FILE MANAGER: File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon  to enter into DOCUMENTS MANAGER.

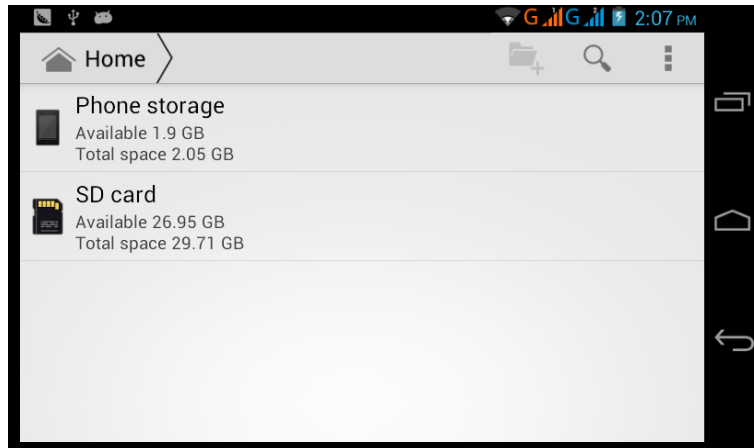

RECORDER

In the main interface or desktop, click recorder icon to enter into record interface, click record key start red button to start record. Click Stop key stop to stop recording. Click Play key to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually. Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

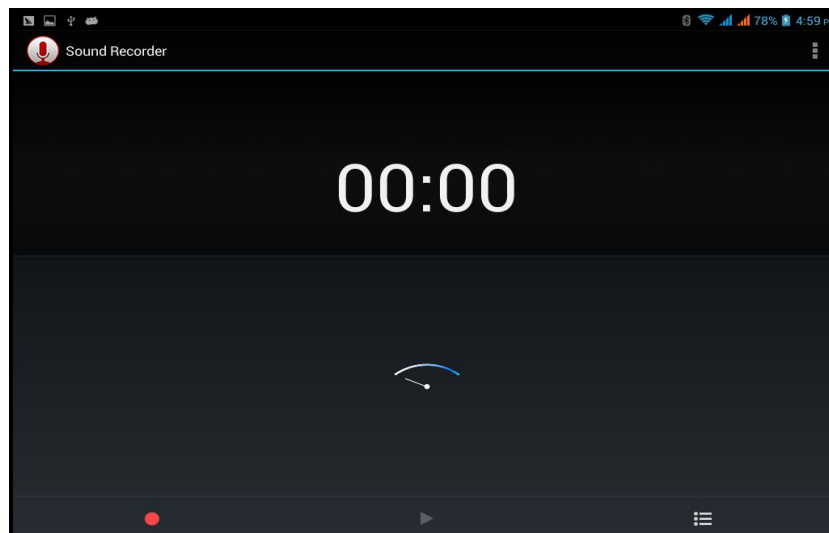

INSTALLATION OF PROCEDURES

Install the third party application procedure

- Click "file manager" application procedure; choose the application procedure you need to install.
- Hold the application procedure you need to install.
- It popup install, click install apk.

- Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

"Features can change without notice"



IMPORTED

FERSON ELECTRÓNICA, S.A.

CIF: A-41111881

SANTA CLARA DE CUBA 12

SEVILLA

ESPAÑA

DECLARATION OF CONFORMITY

Ferson Electrónica, S.A. declares under our responsibility that the equipment meets the requirements indicated in the following directives:

ECM DIRECTIVES

EN60950-1:2006/A11:2009/A1:2010

EN 62311: 2088

EN 301 489-1 V1.9.2:2011-09

EN 301 489-17 V2.1.1:2009-05

EN 300 328 V1.7.1: 2006-10

ETSI EN 301 489-1 V1.9.2(2011-09)

ETSI EN 301 489-17 V2.1.1(2009-05)

Description of apparatus:

Model BRIGMTON BTPC-970QC3G

Mobile Internet Device



BRIGMTON

surfing technology



www.brigmton.eu